





























M331N

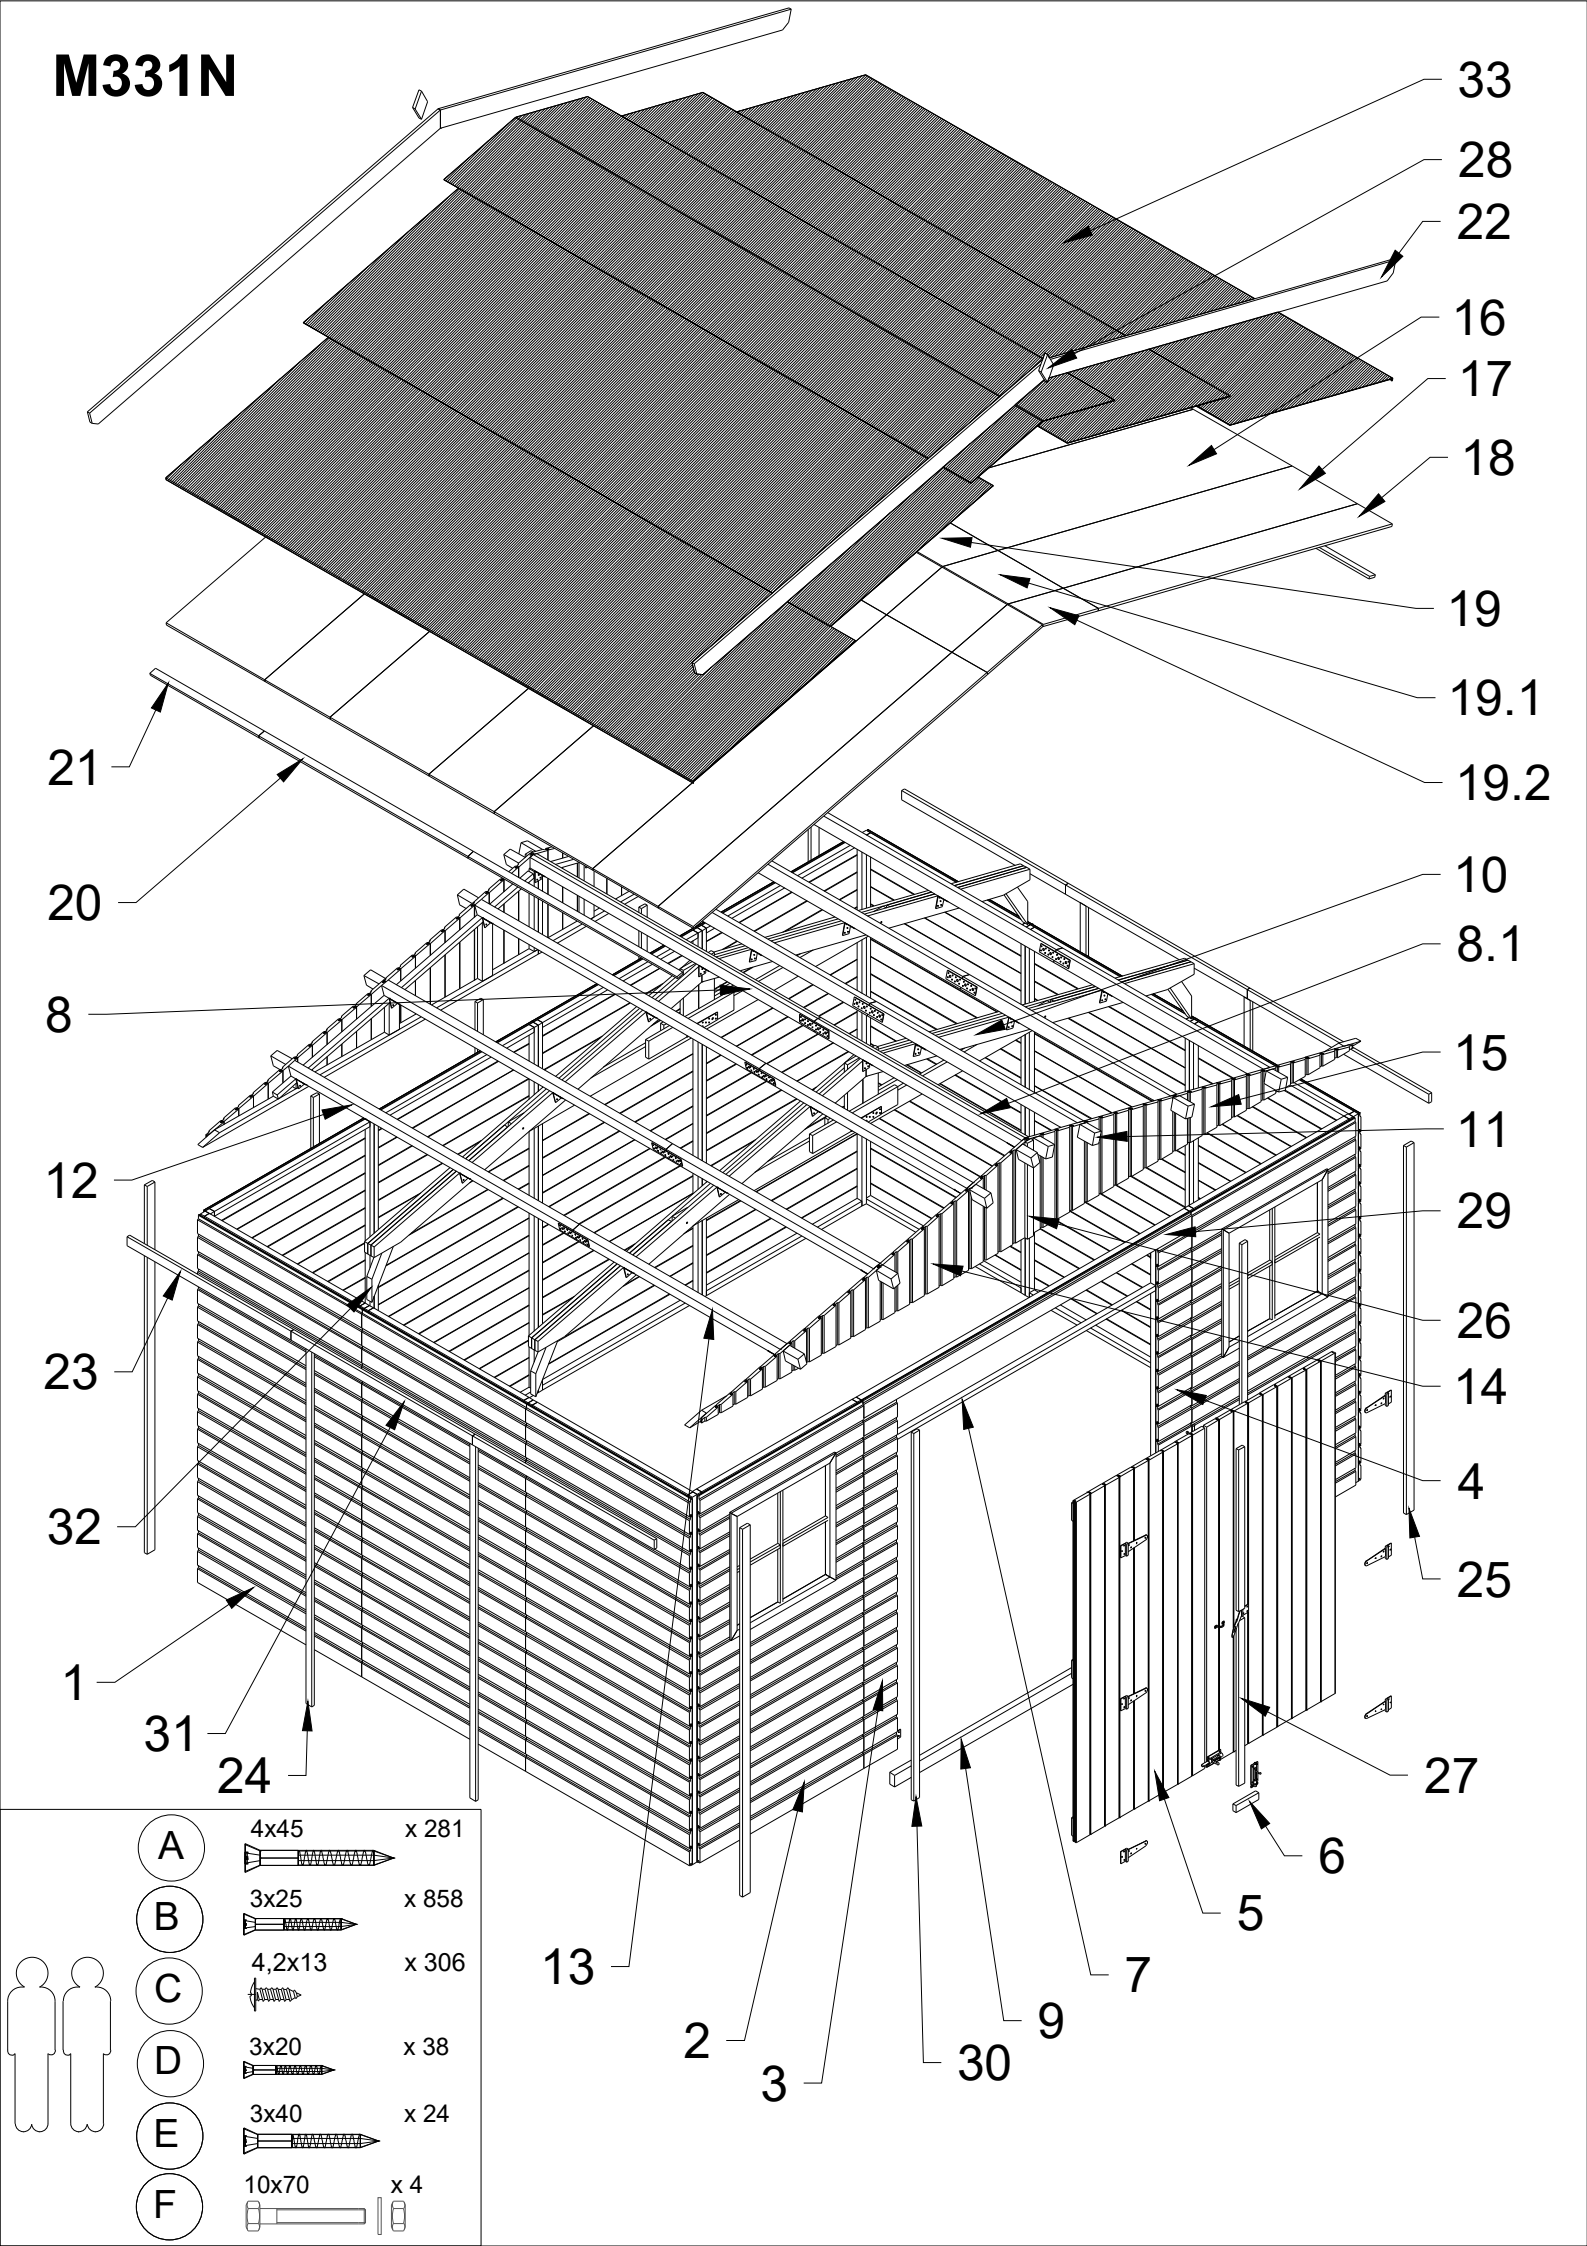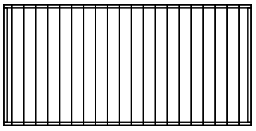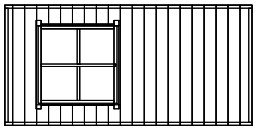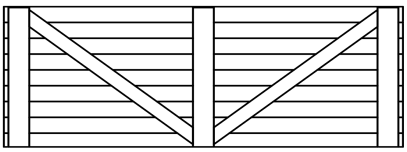


A	4x45	x 281
B	3x25	x 858
C	4,2x13	x 306
D	3x20	x 38
E	3x40	x 24
F	10x70	x 4


№		PCS	mm	mm	mm
1		10		980	1900
2		2		980	1900
3		1		200	1814
4		1		200	1814
5		2		770	1760
6		1	19	35	135
7		1	25	30	1560
8		1	40	60	1700
8.1		1	40	60	1240
9		1	30	60	1560
10		4		546	2150
11		16	40	60	89
12		6	40	60	1700
13		6	40	60	1240
14		2		500	2005
15		2		500	2005
16		6	OSB	590	1810
17		6	OSB	390	1810
18		2	OSB	210	1810


19		6	OSB	340	590
19.1		6	OSB	340	390
19.2		2	OSB	210	340
20		4	OSB	35	1250
21		2	OSB	35	650
22		4	13	92	2160
23		2	17	47	980
24		4	15	35	1835
25		4	17	47	1900
26		2	15	35	495
27		2	15	35	855
28		2	15	75	145
29		1		89	1960
30		5	15	35	1900
31		4	17	47	1085
32		4	30	60	275
33		5		1,0m	3,33m
34		32			
35		1			
36		6			
37		18			
38		7			
39		3			


OPTIONAL - FLOOR INSTALLATION


If your product includes the floor kit, start the assembly with this section. Complete the floor installation first, before starting the main house installation.
If your product does not include the floor kit, skip the entire floor installation section and start from MAIN HOUSE INSTALLATION.

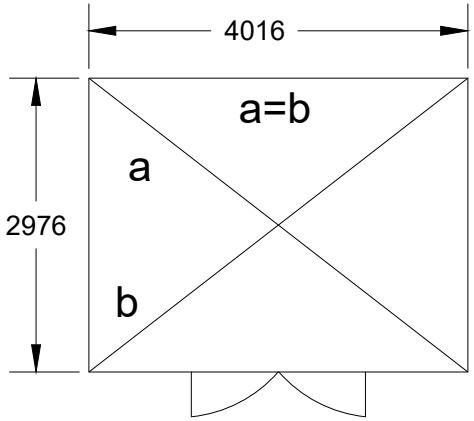


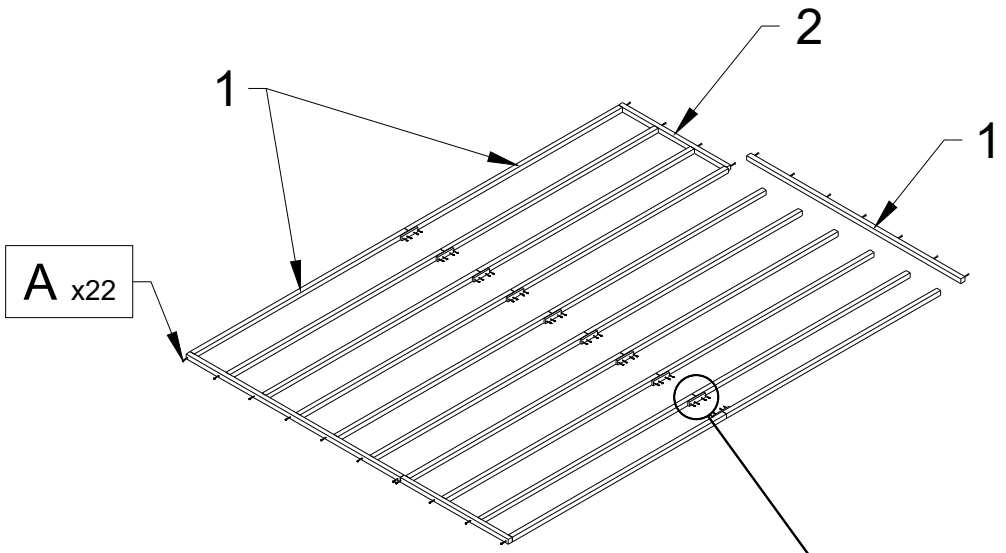


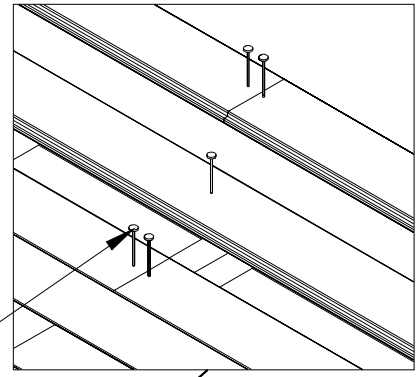

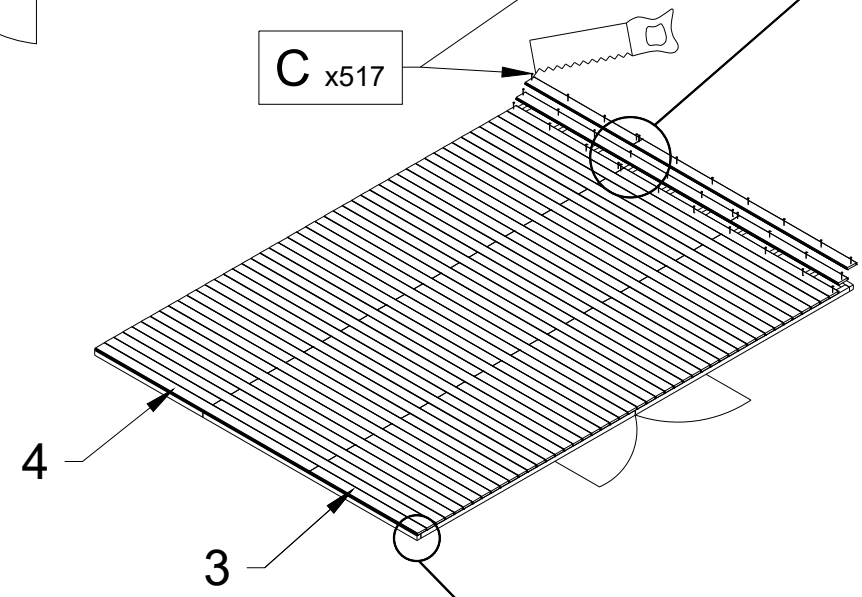

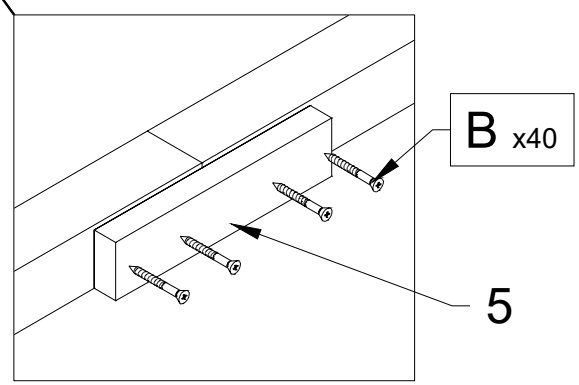

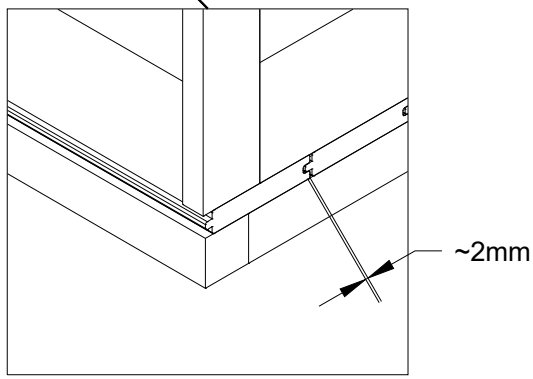



№	PCS	DIMENSIONS		
1	22	38	38	1970
2	2	38	38	1006
3	47	19	92	1006
4	47	19	92	1970
5	10	15	35	150
A	22	 M4X70		
B	40	 M4X45		
C	517			


1


MAIN HOUSE INSTALLATION

Start here if your product does not include the floor kit.
If you assembled the optional floor kit first, continue here after completing it.

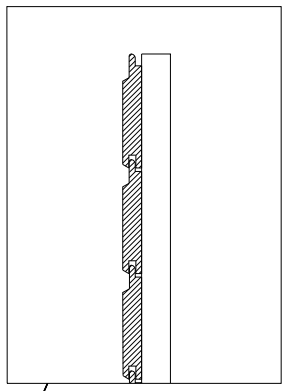


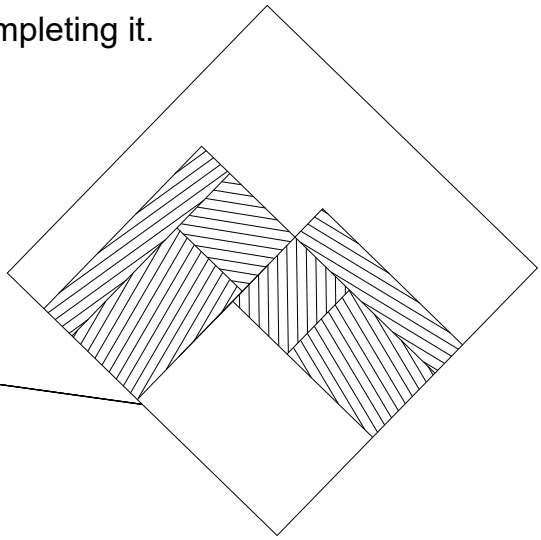

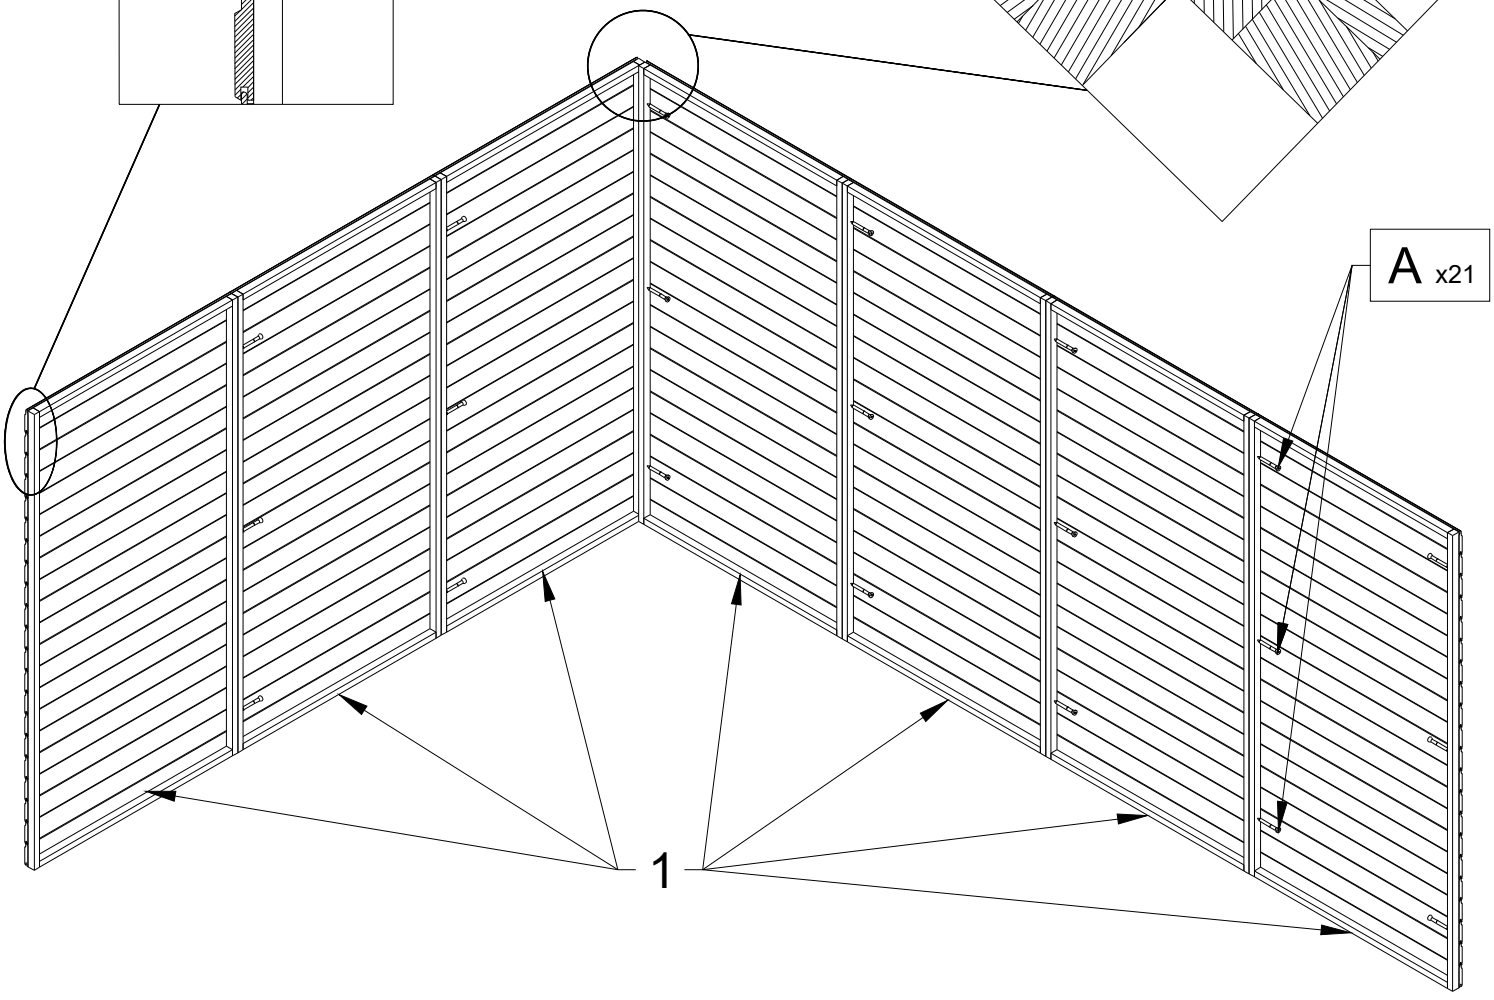


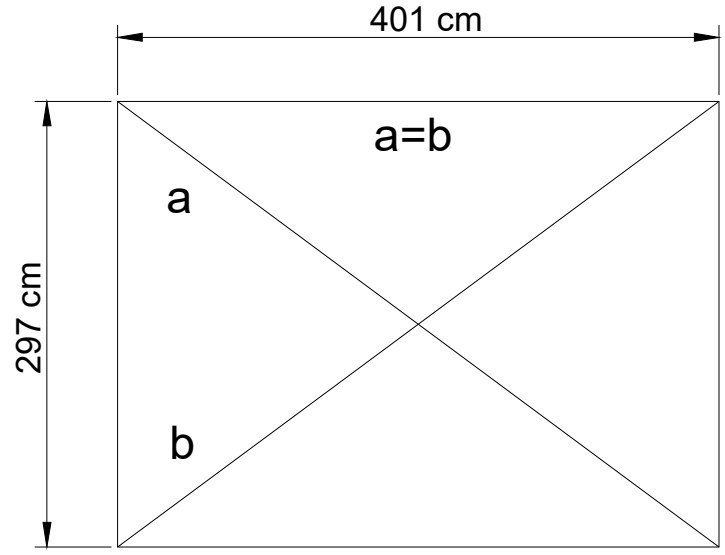


2

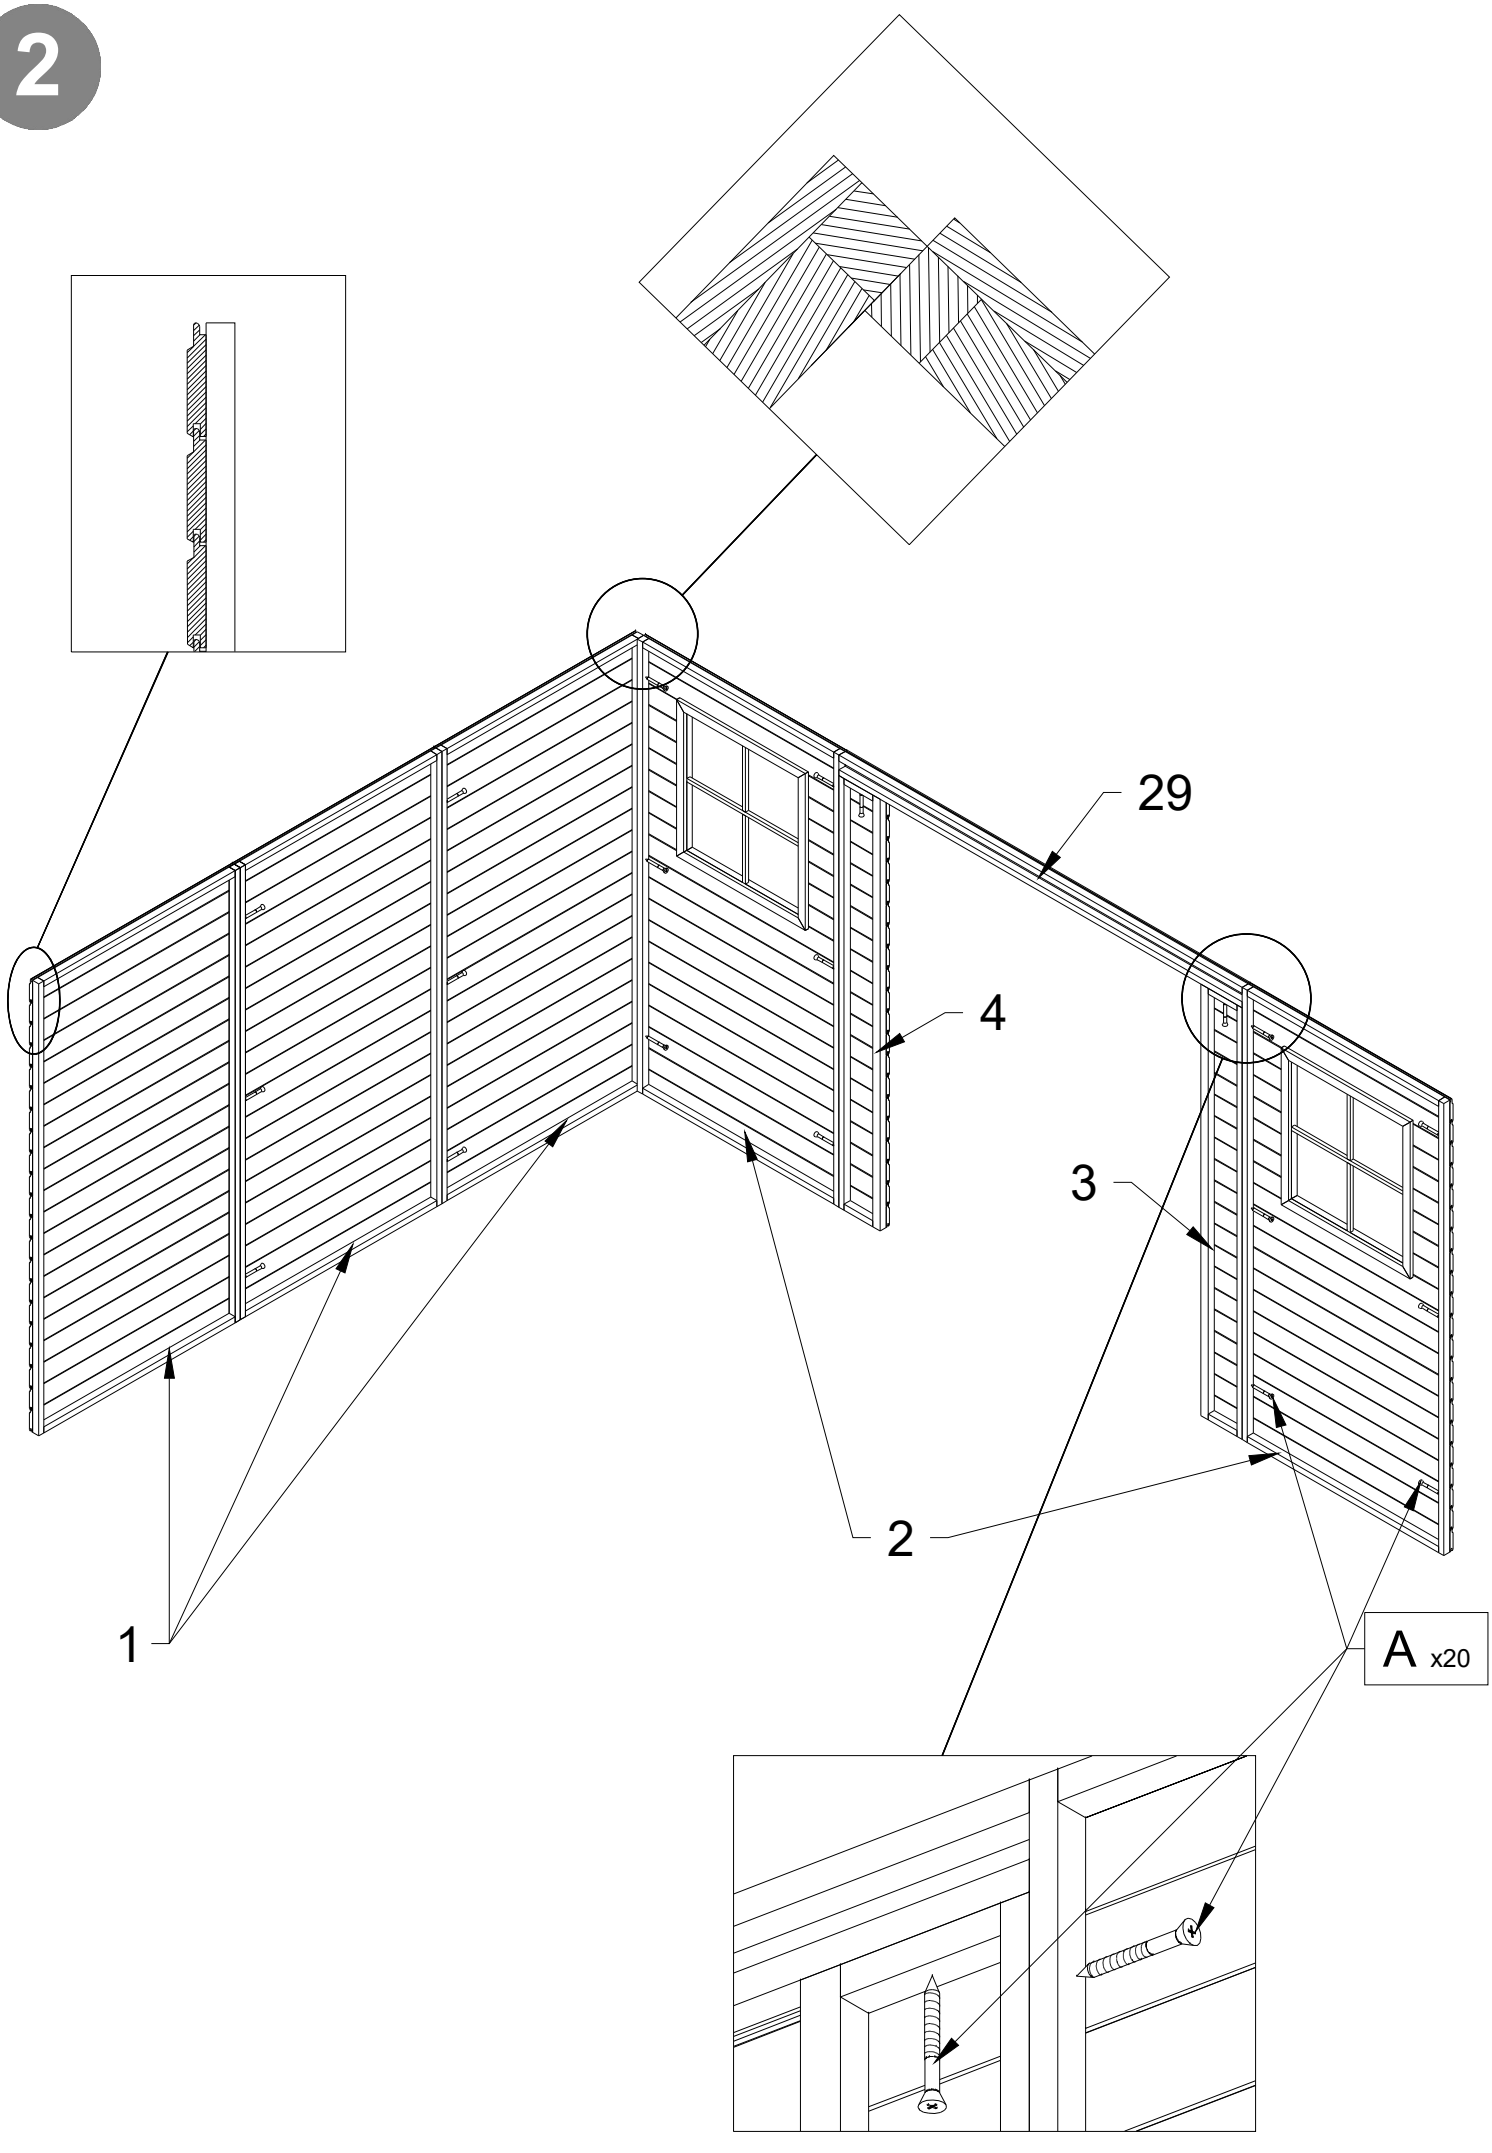


3

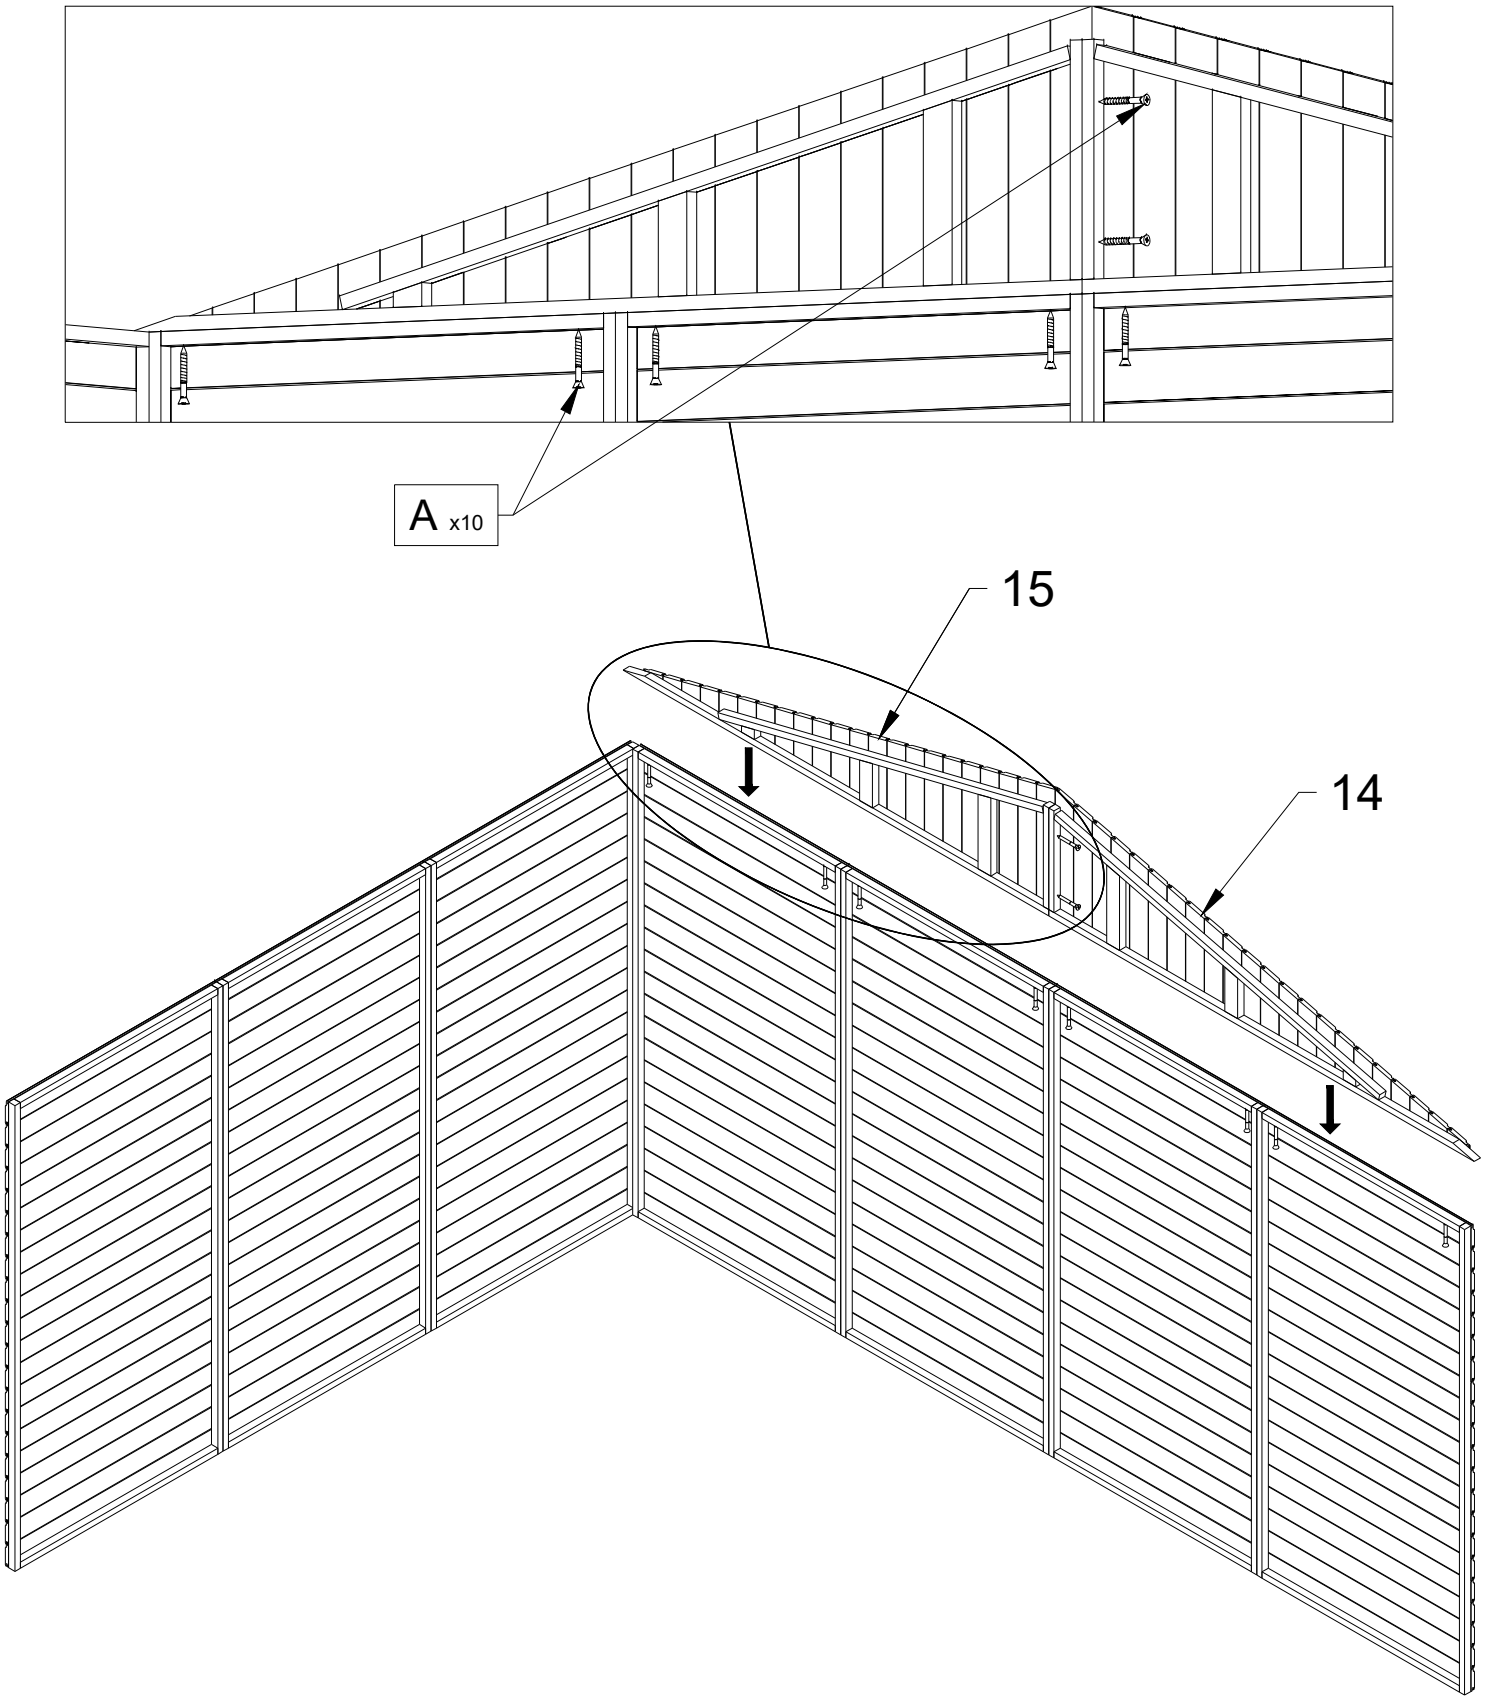


4

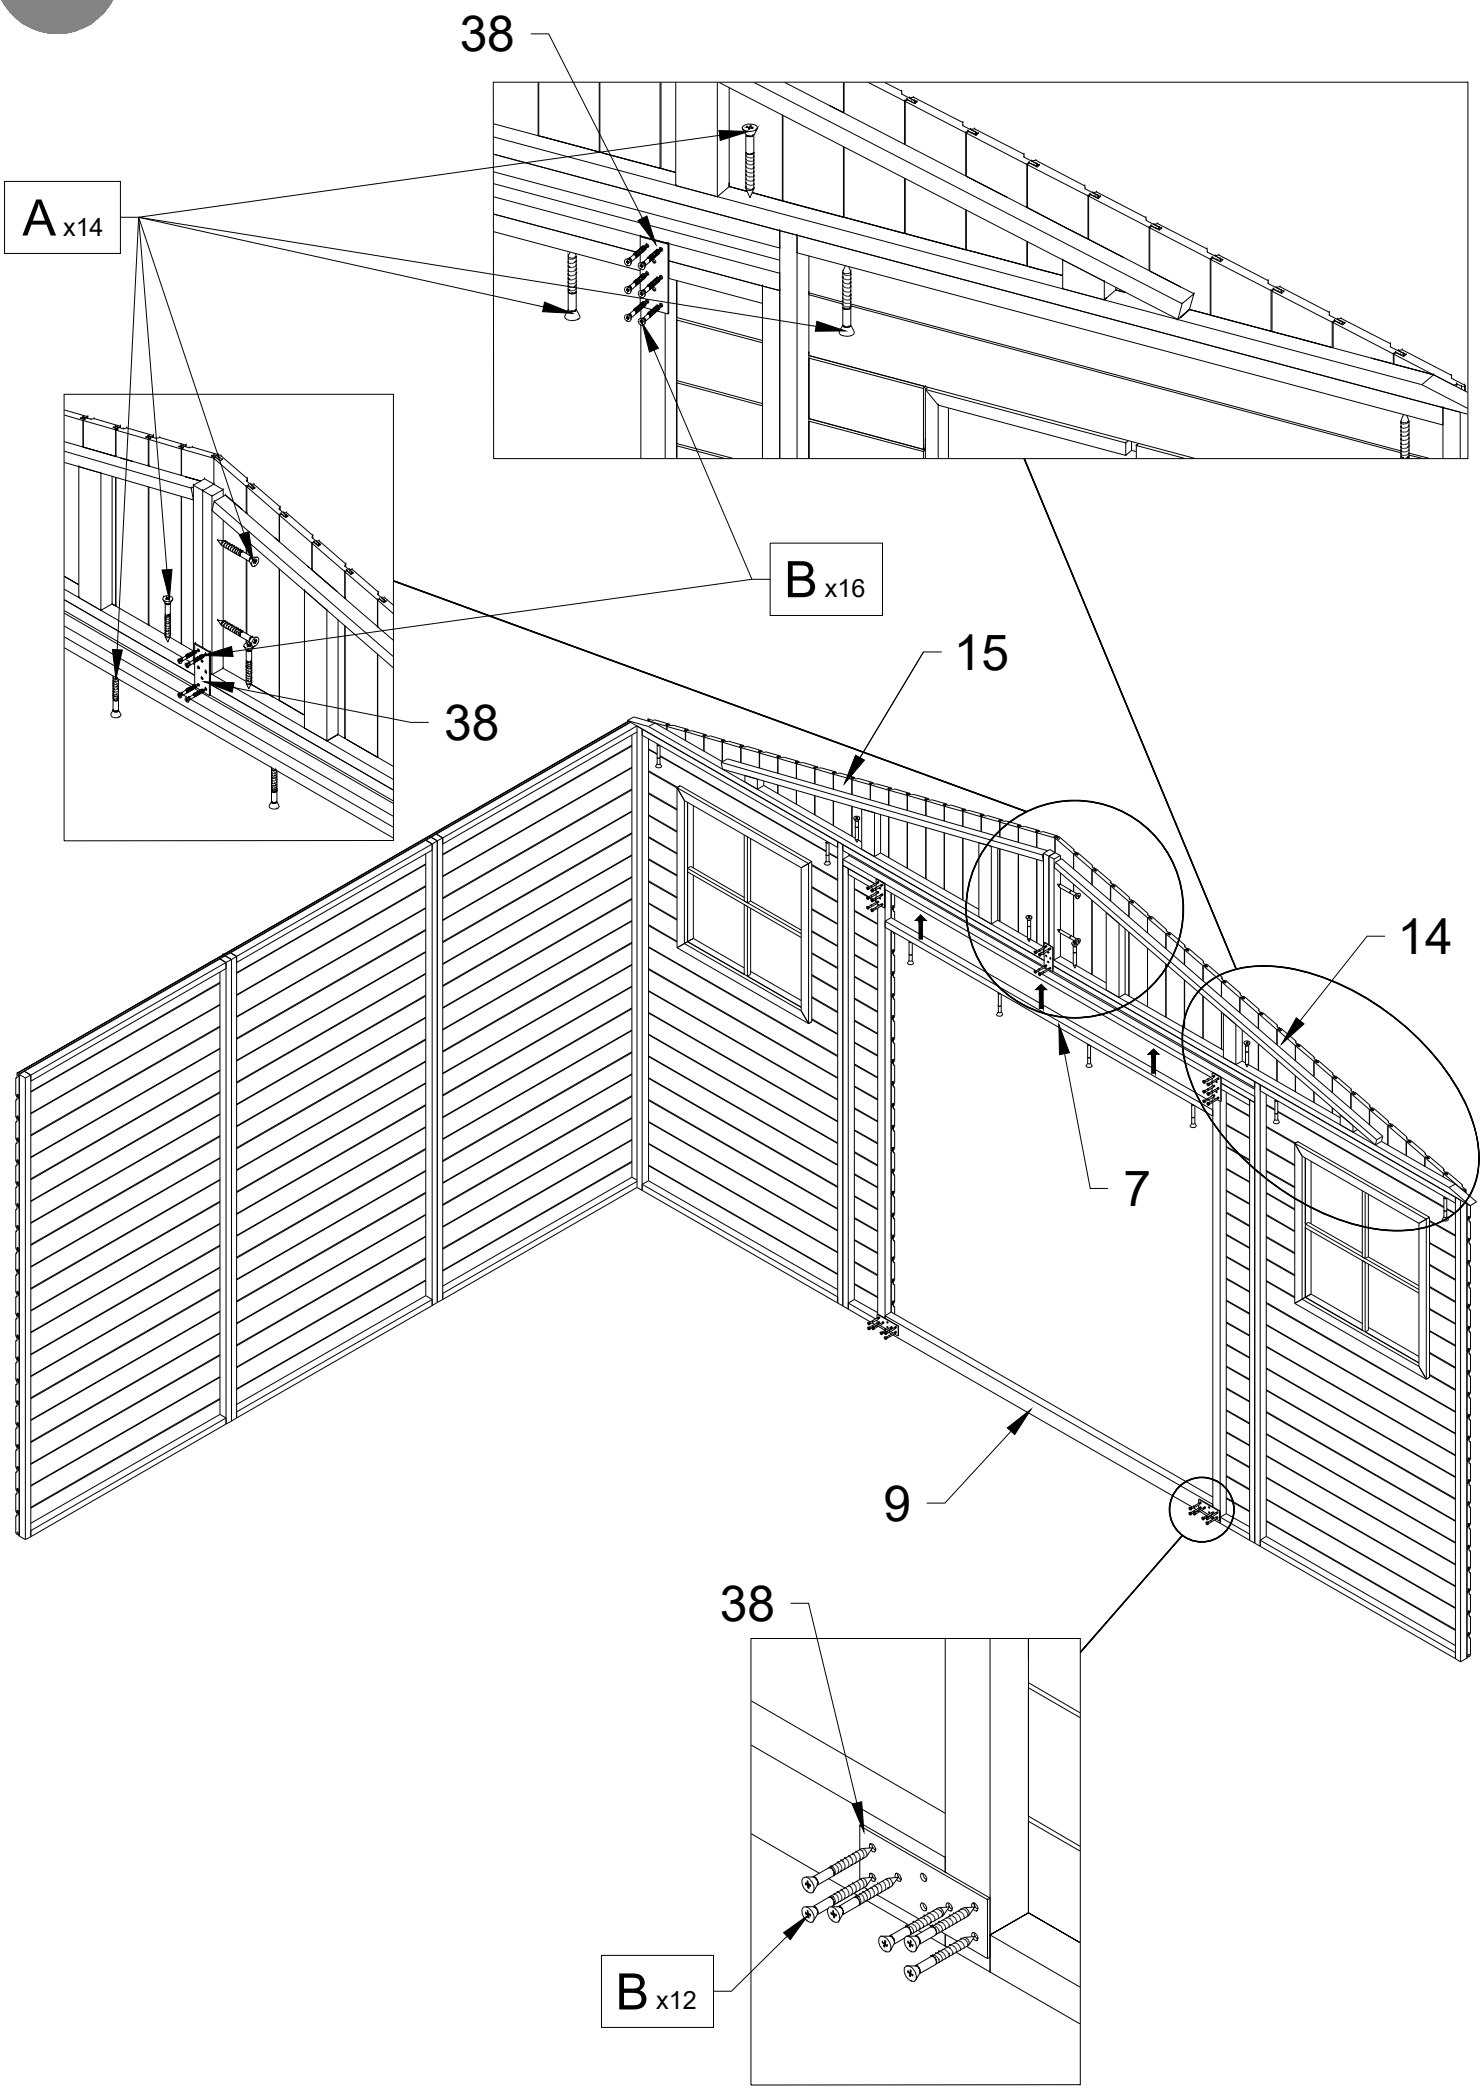


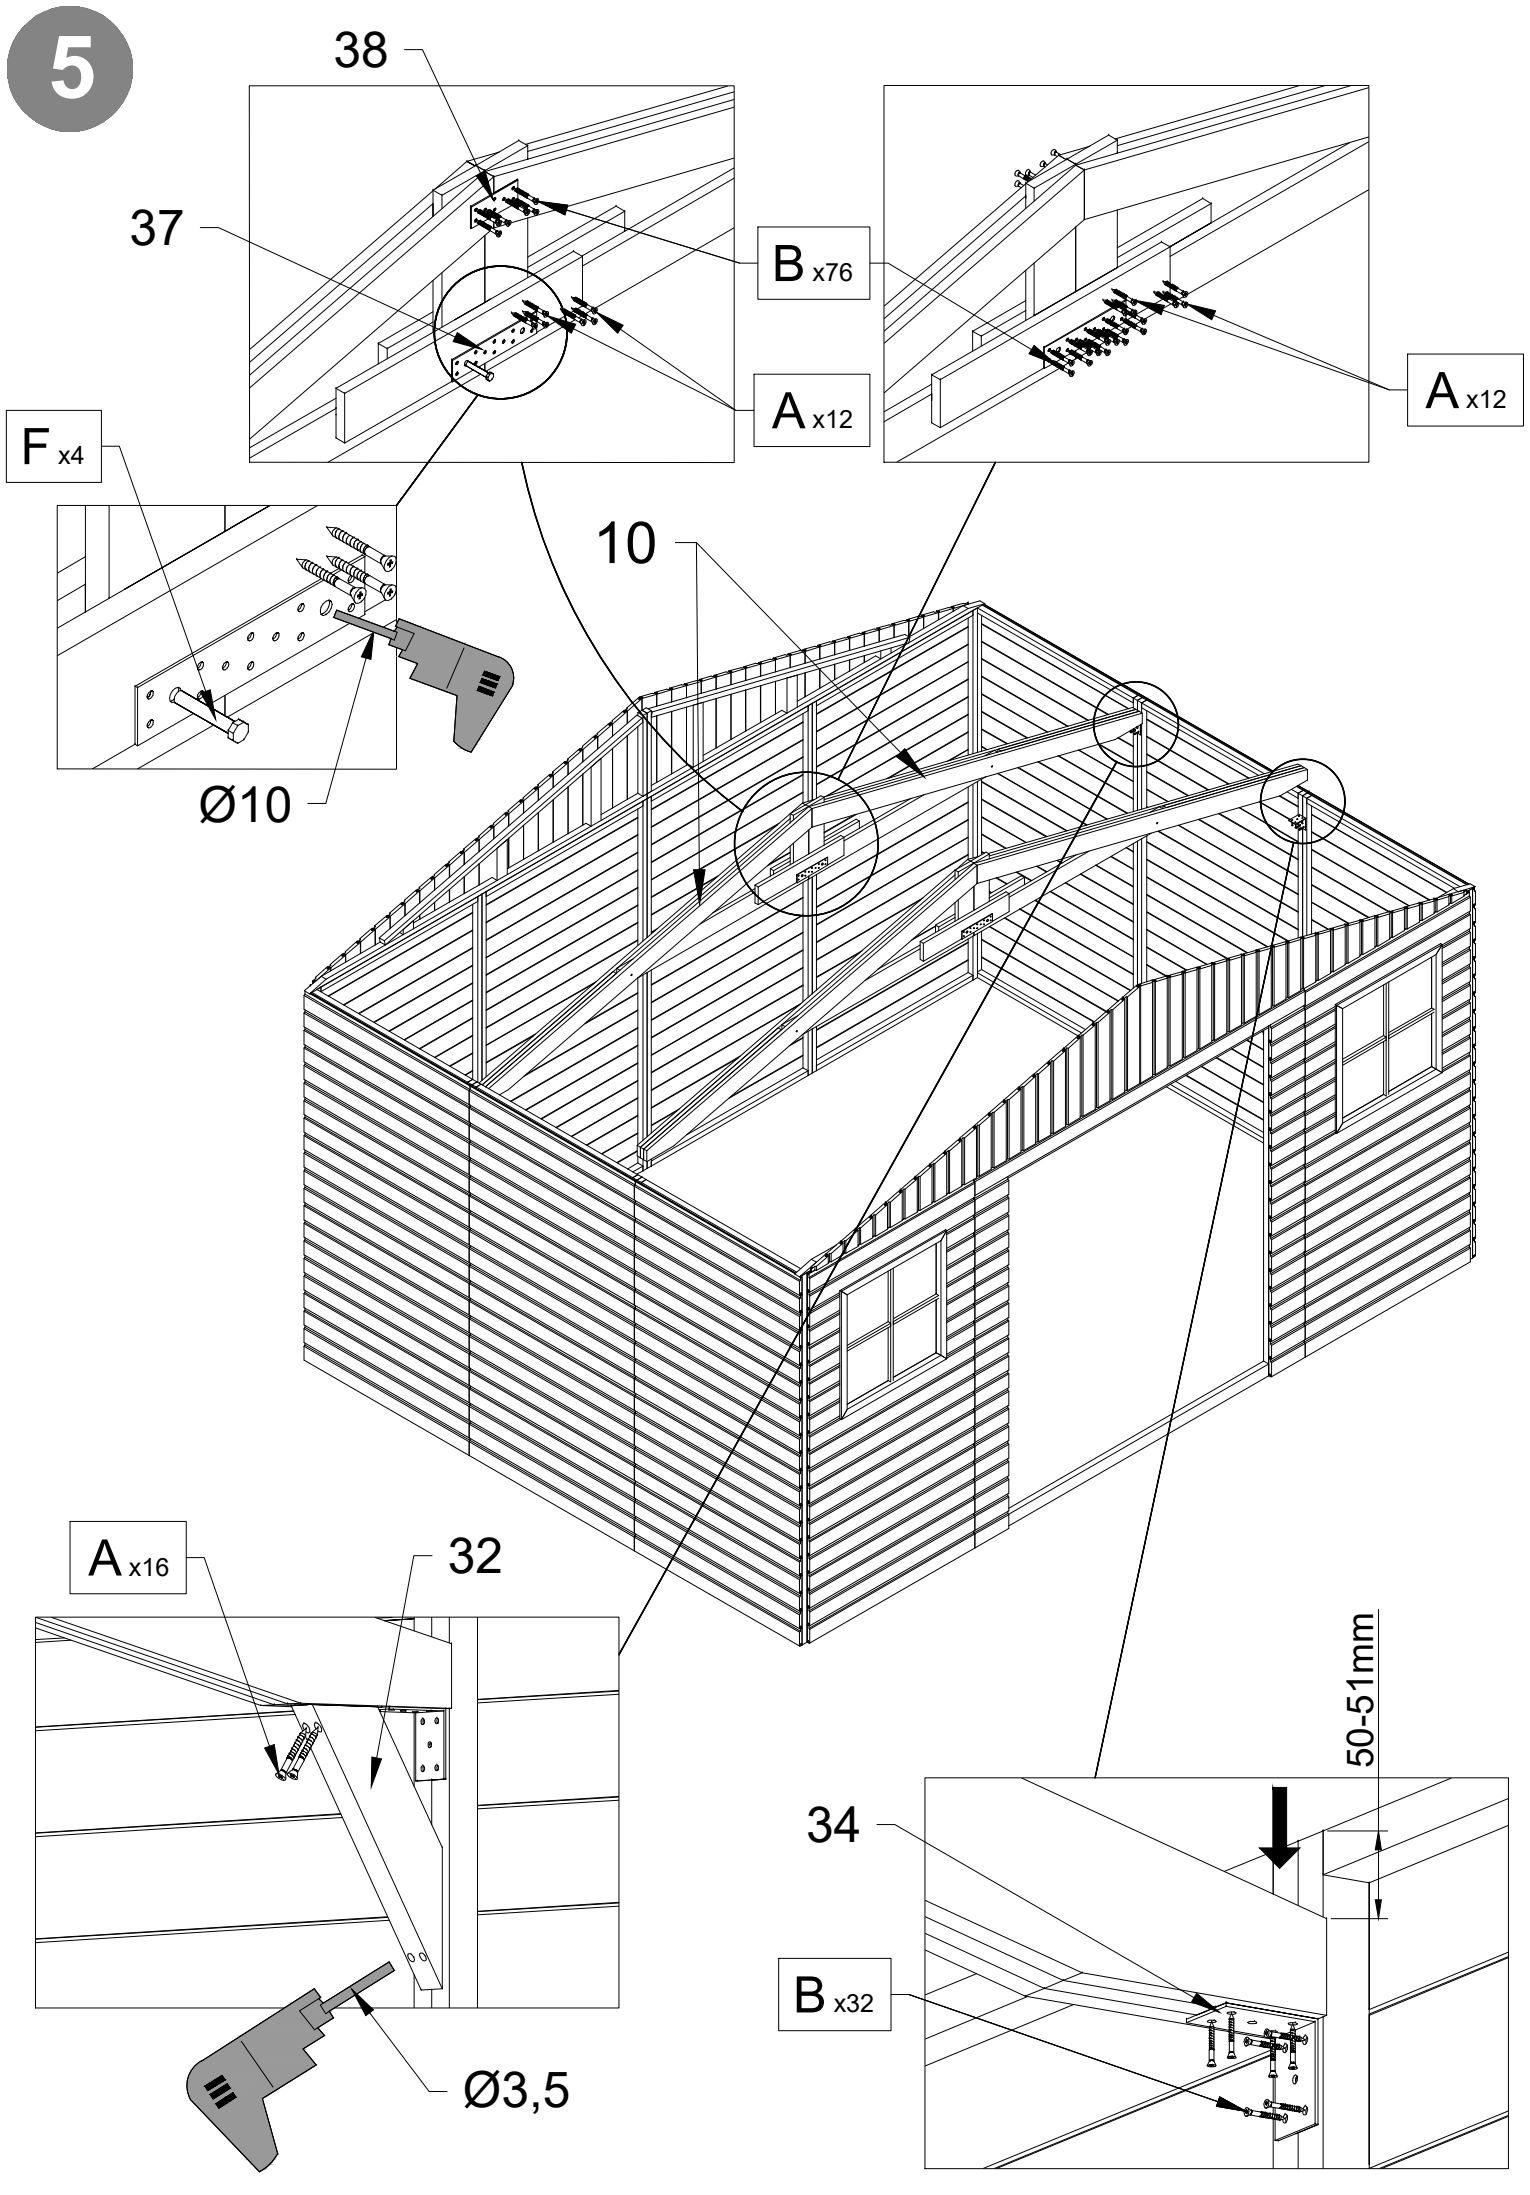
5
38
37
B x76
A x12
A x12
F x4
10
Ø10
A x16
32
Ø3,5
50-51mm
34
B x32


6

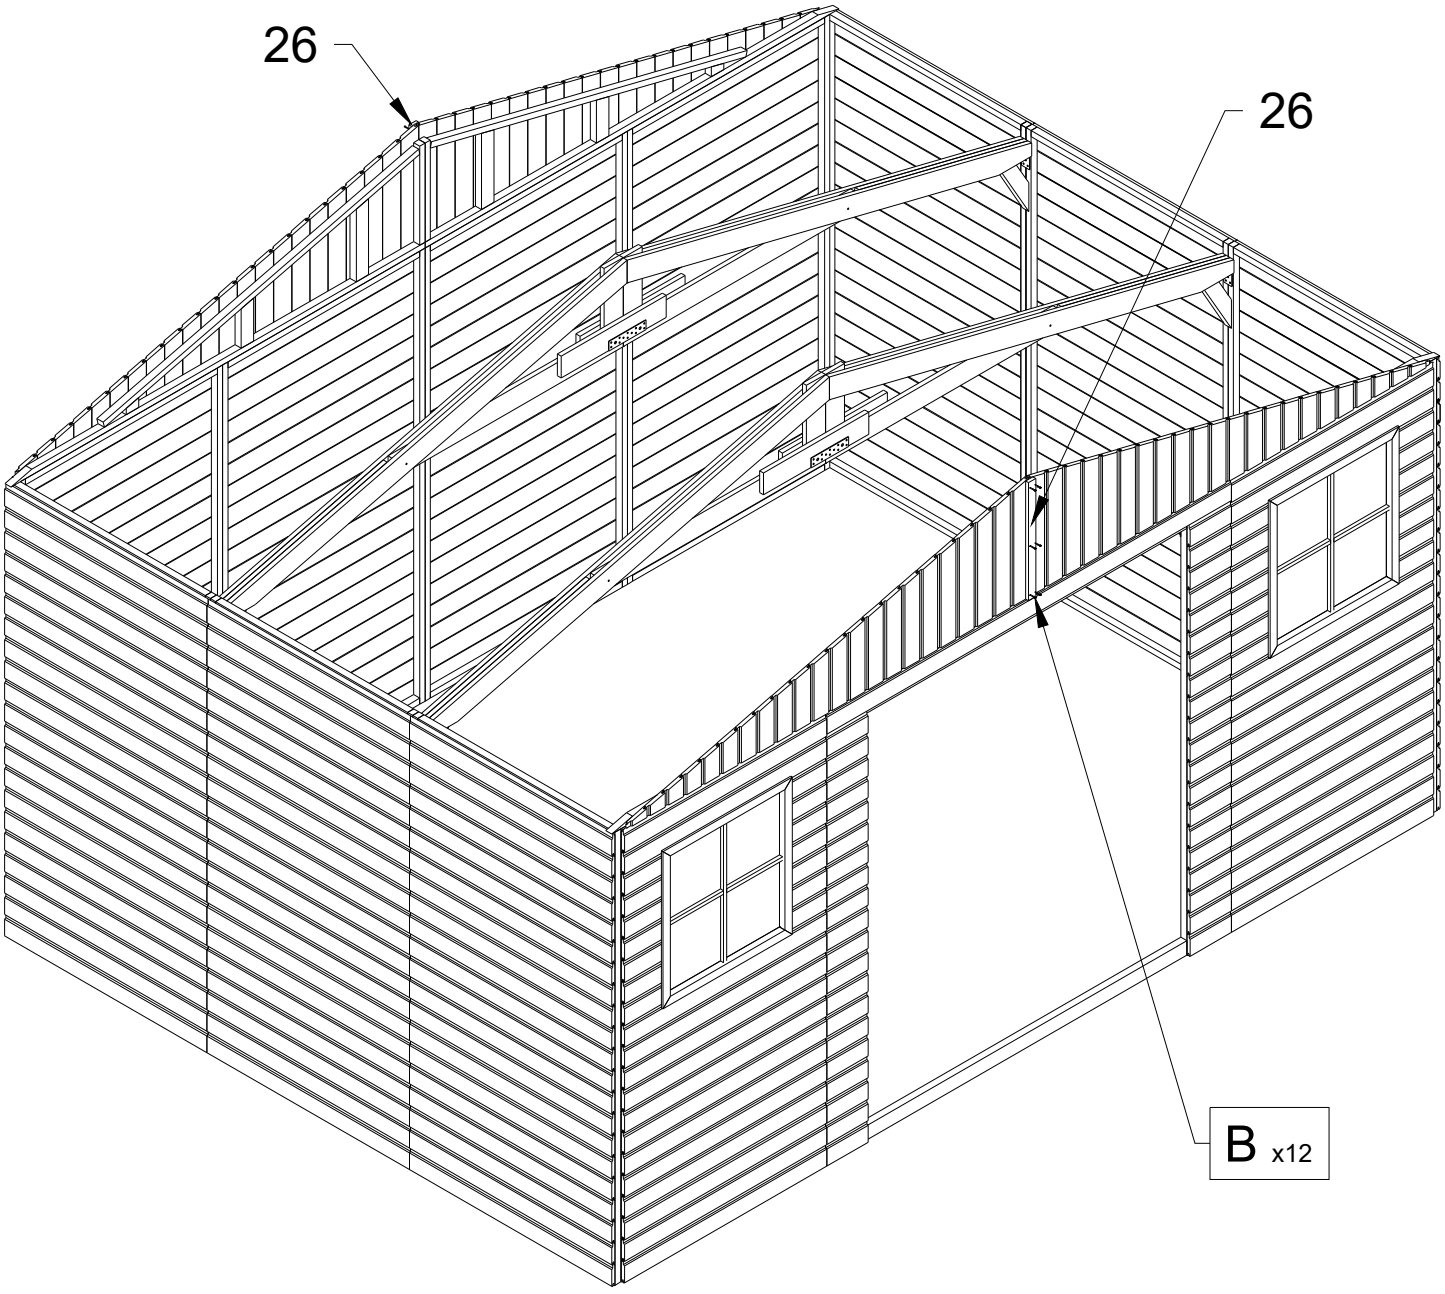


7

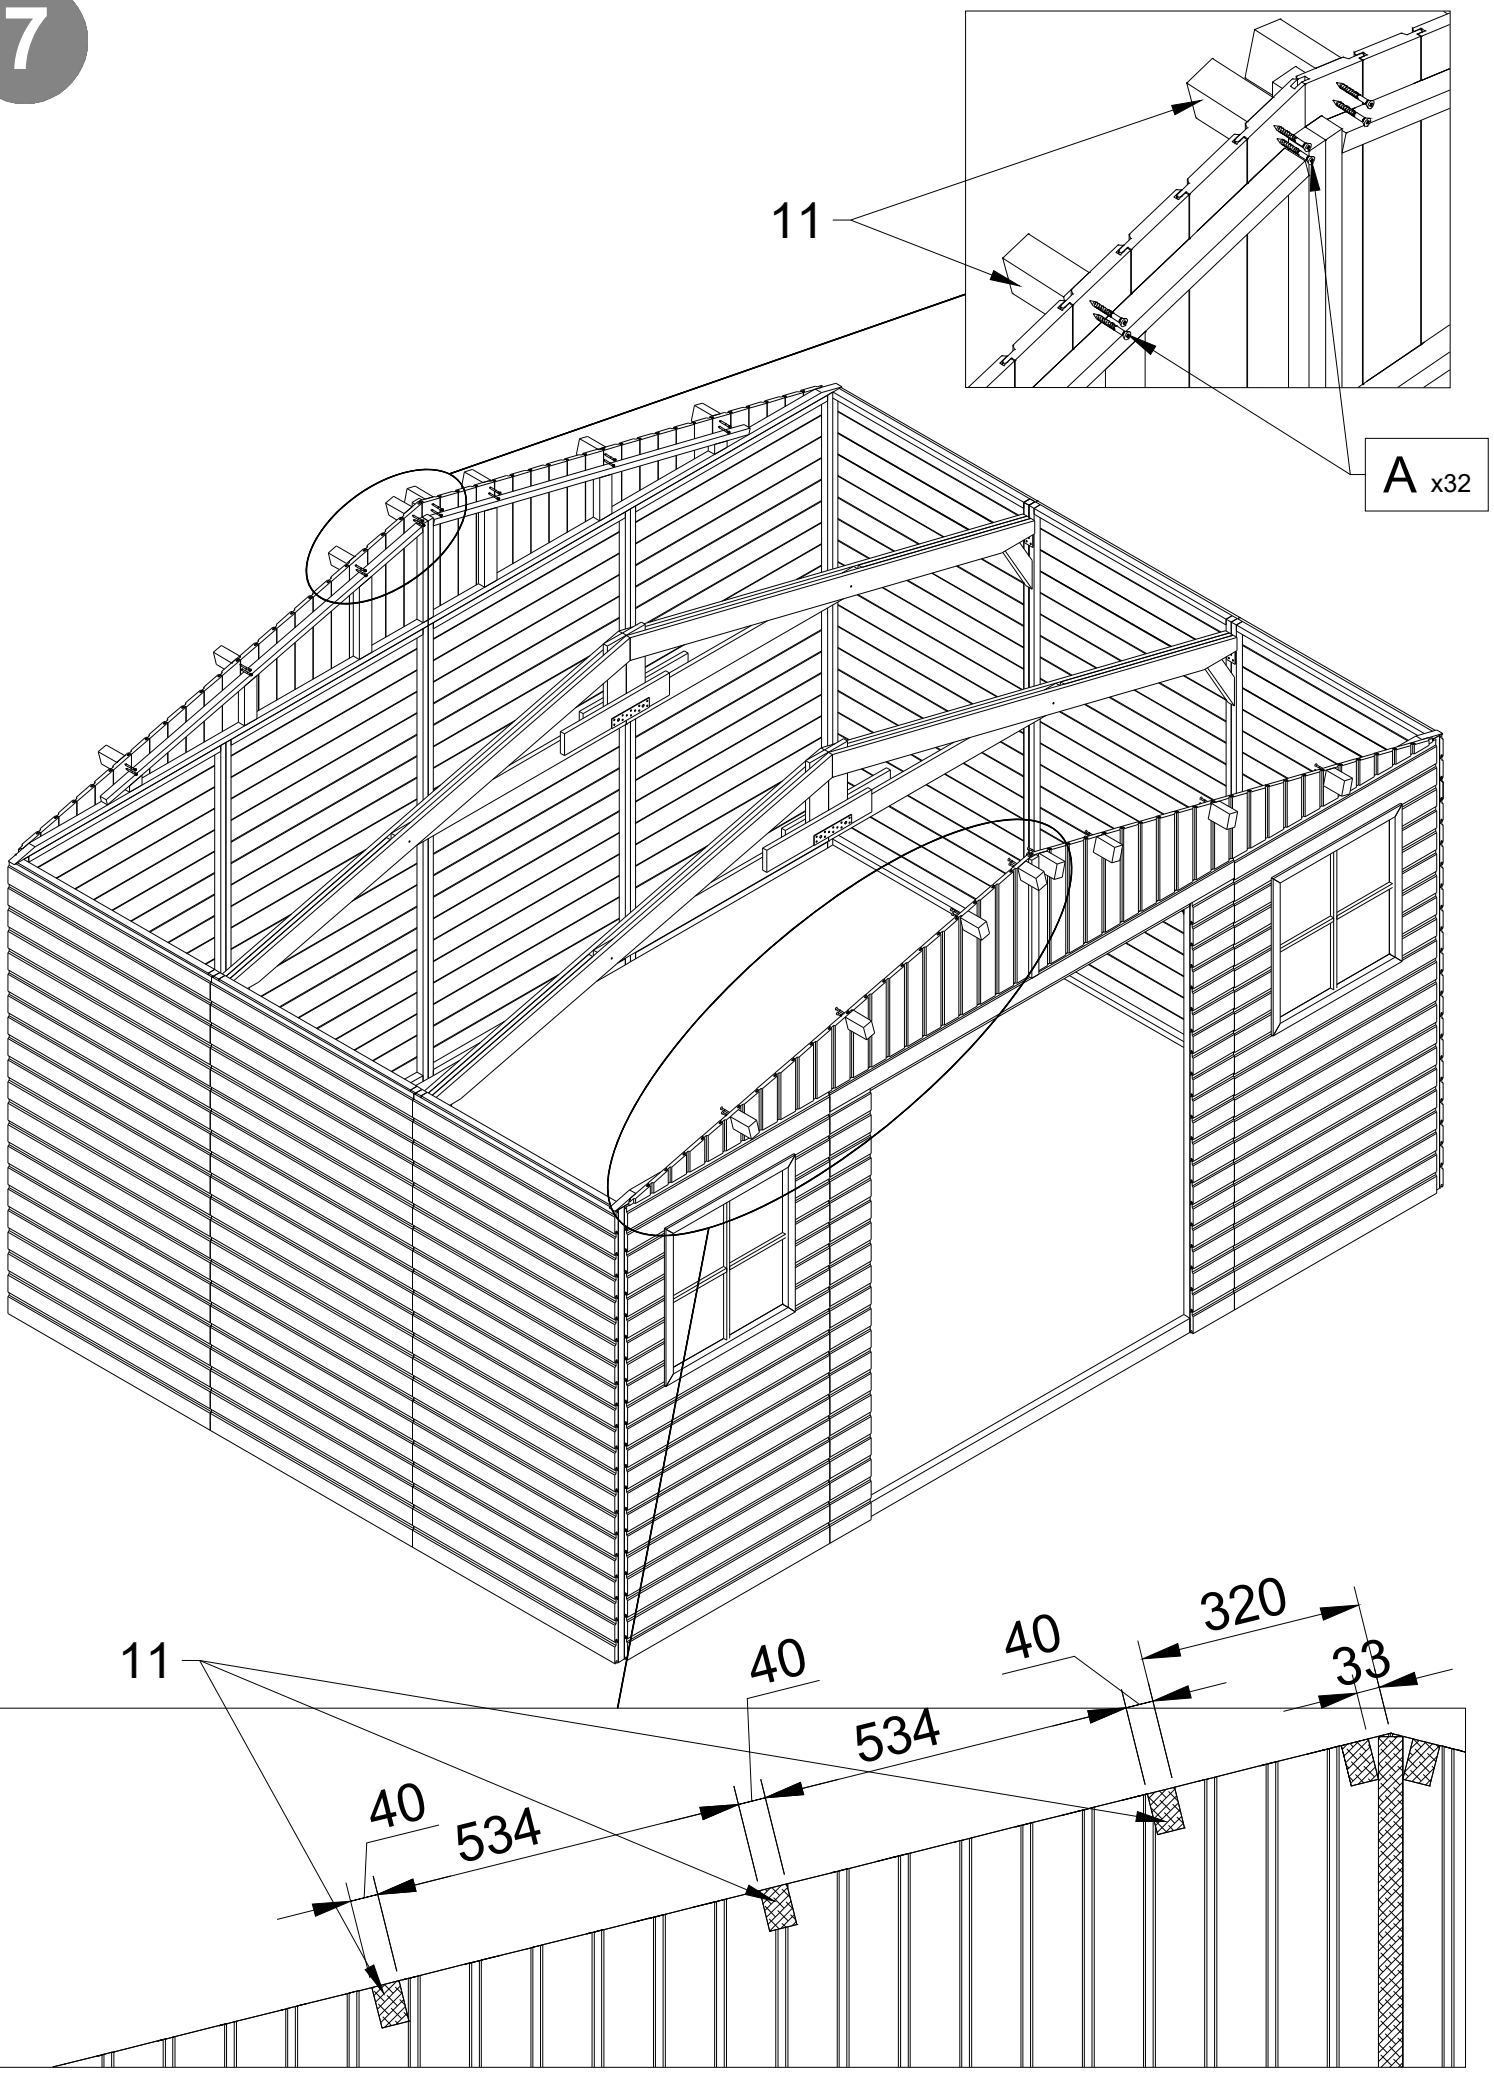

8

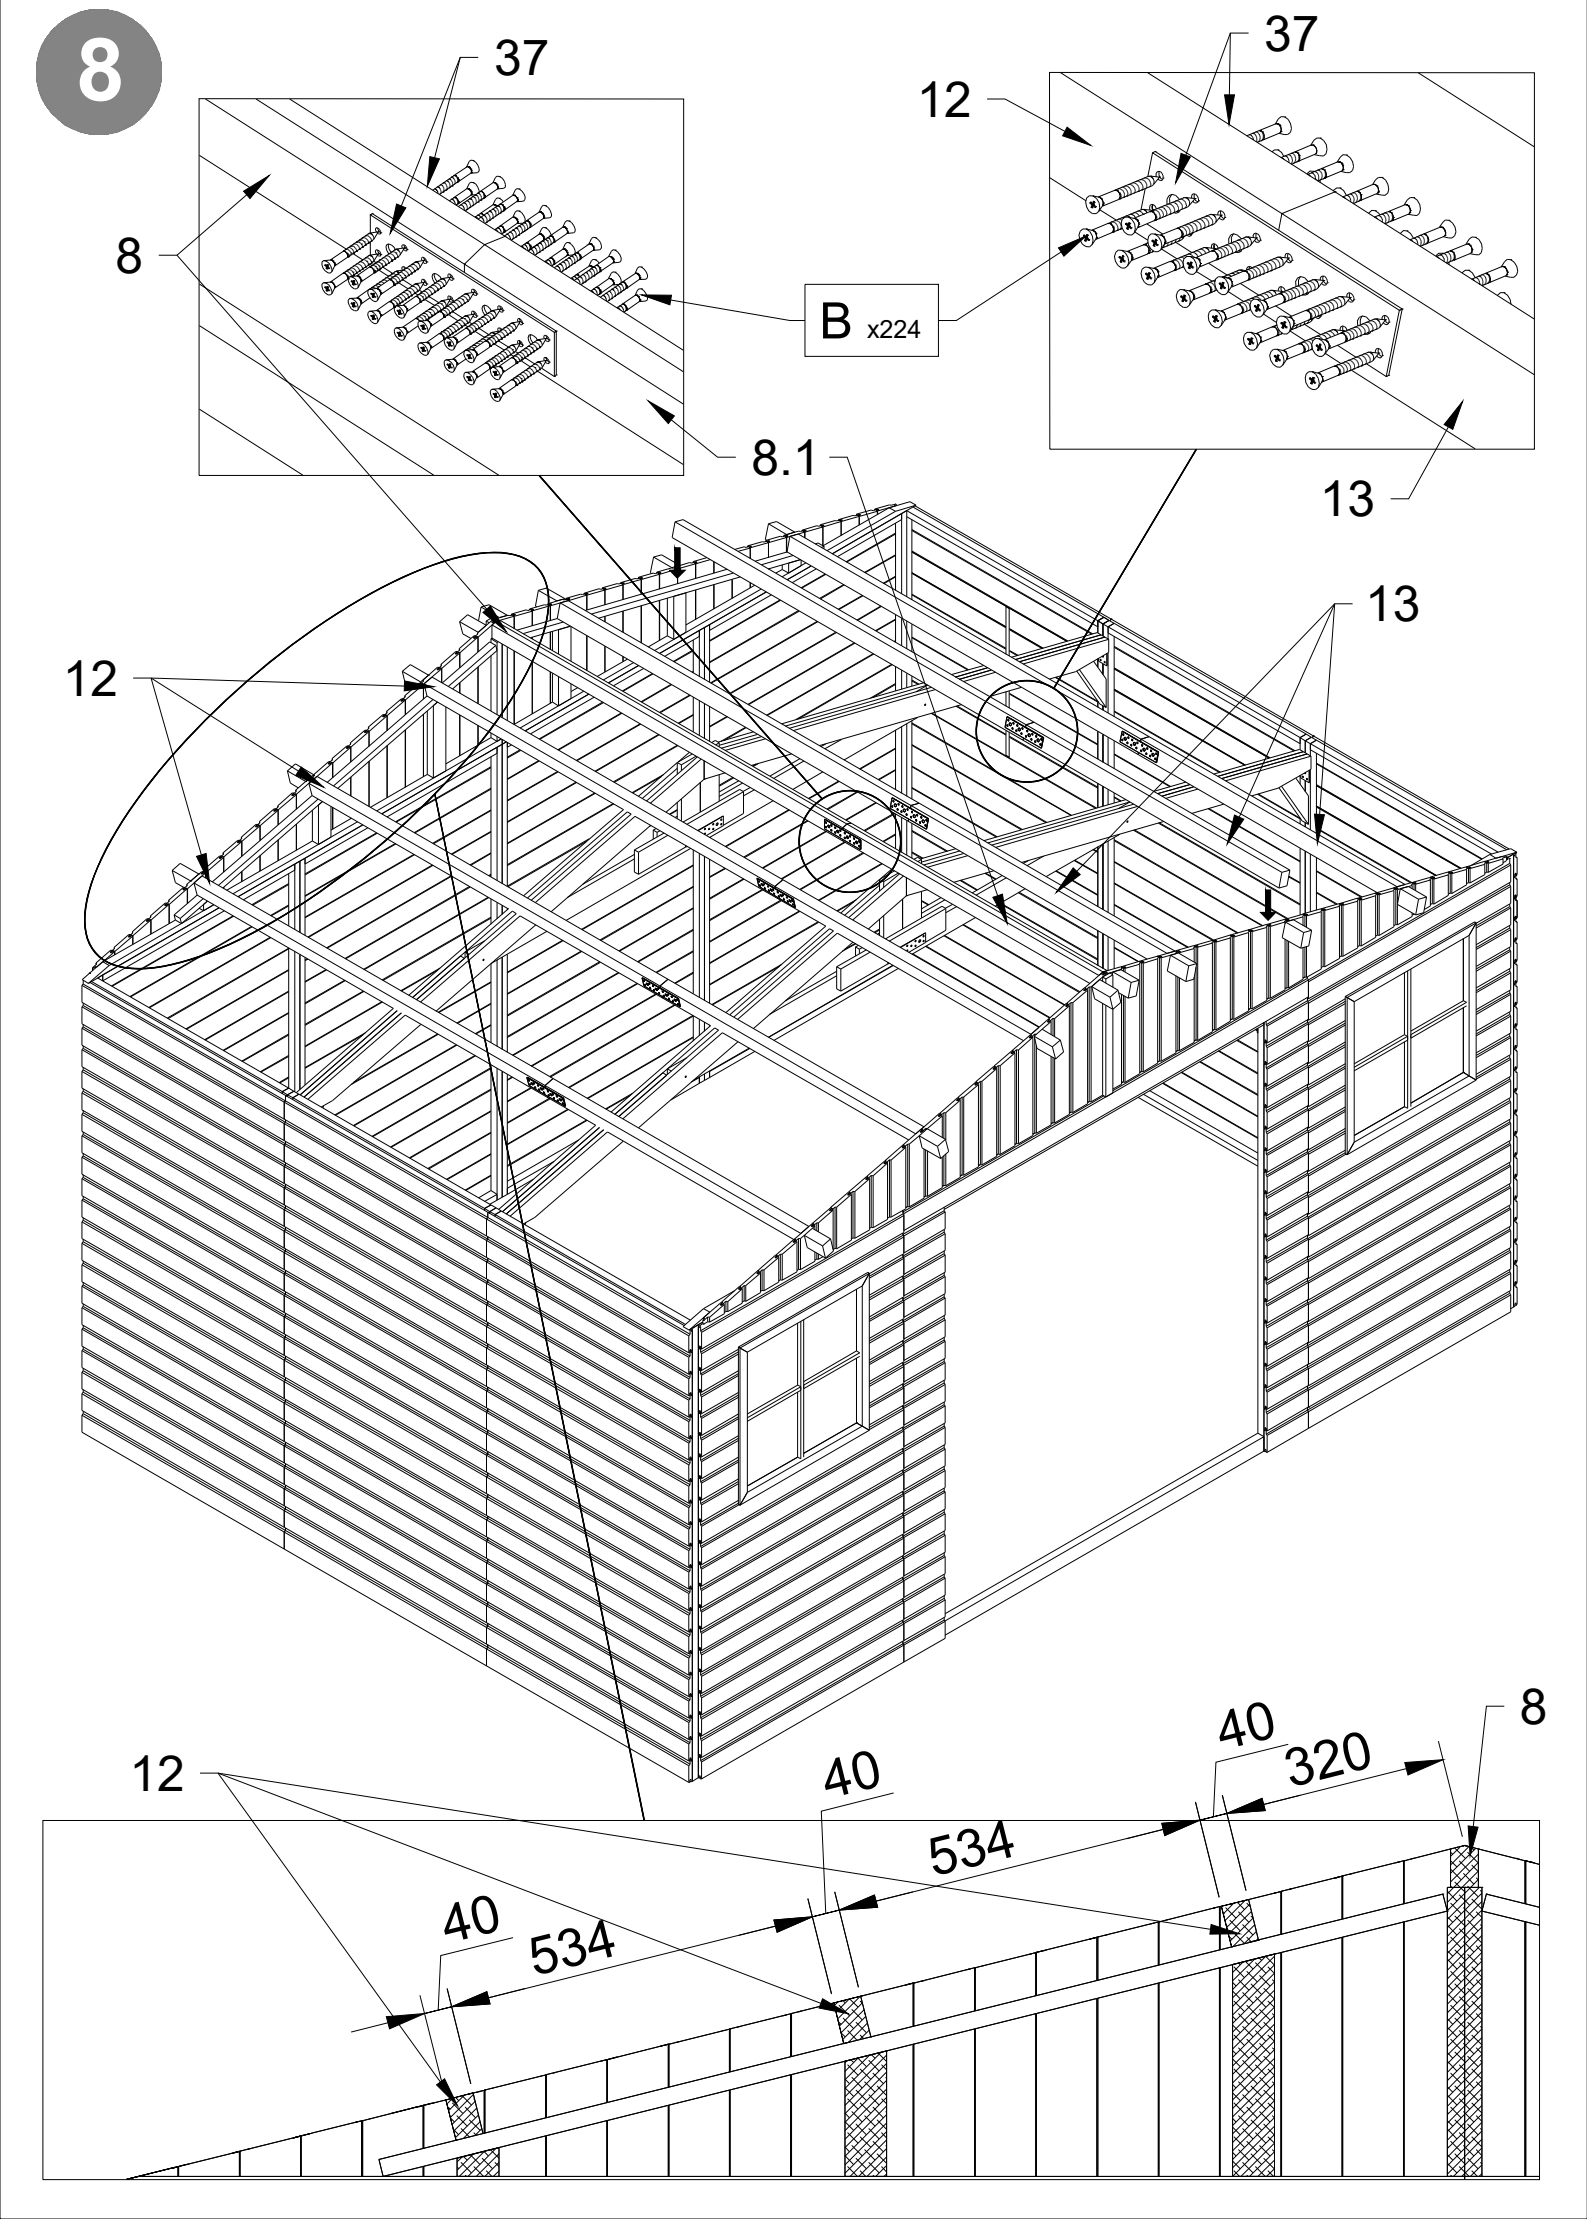


9

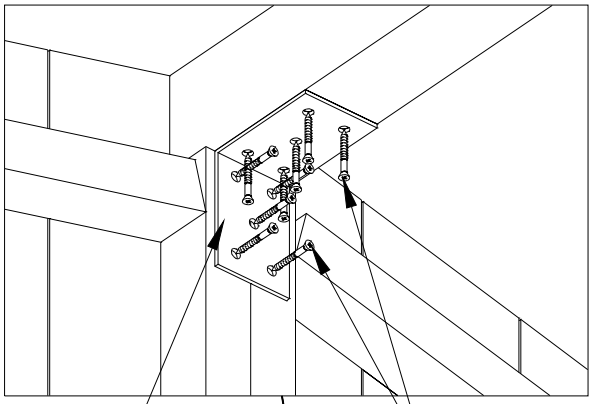


34

B x20

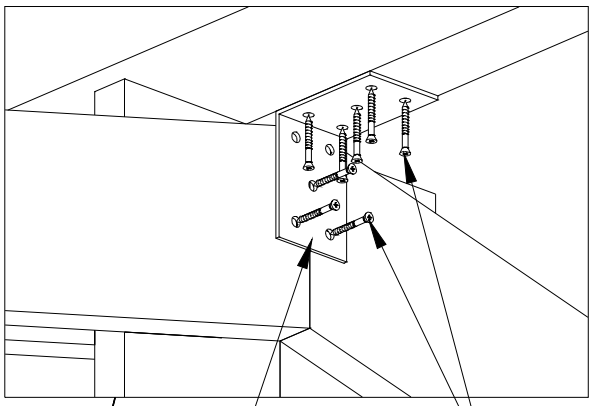


34

B x16

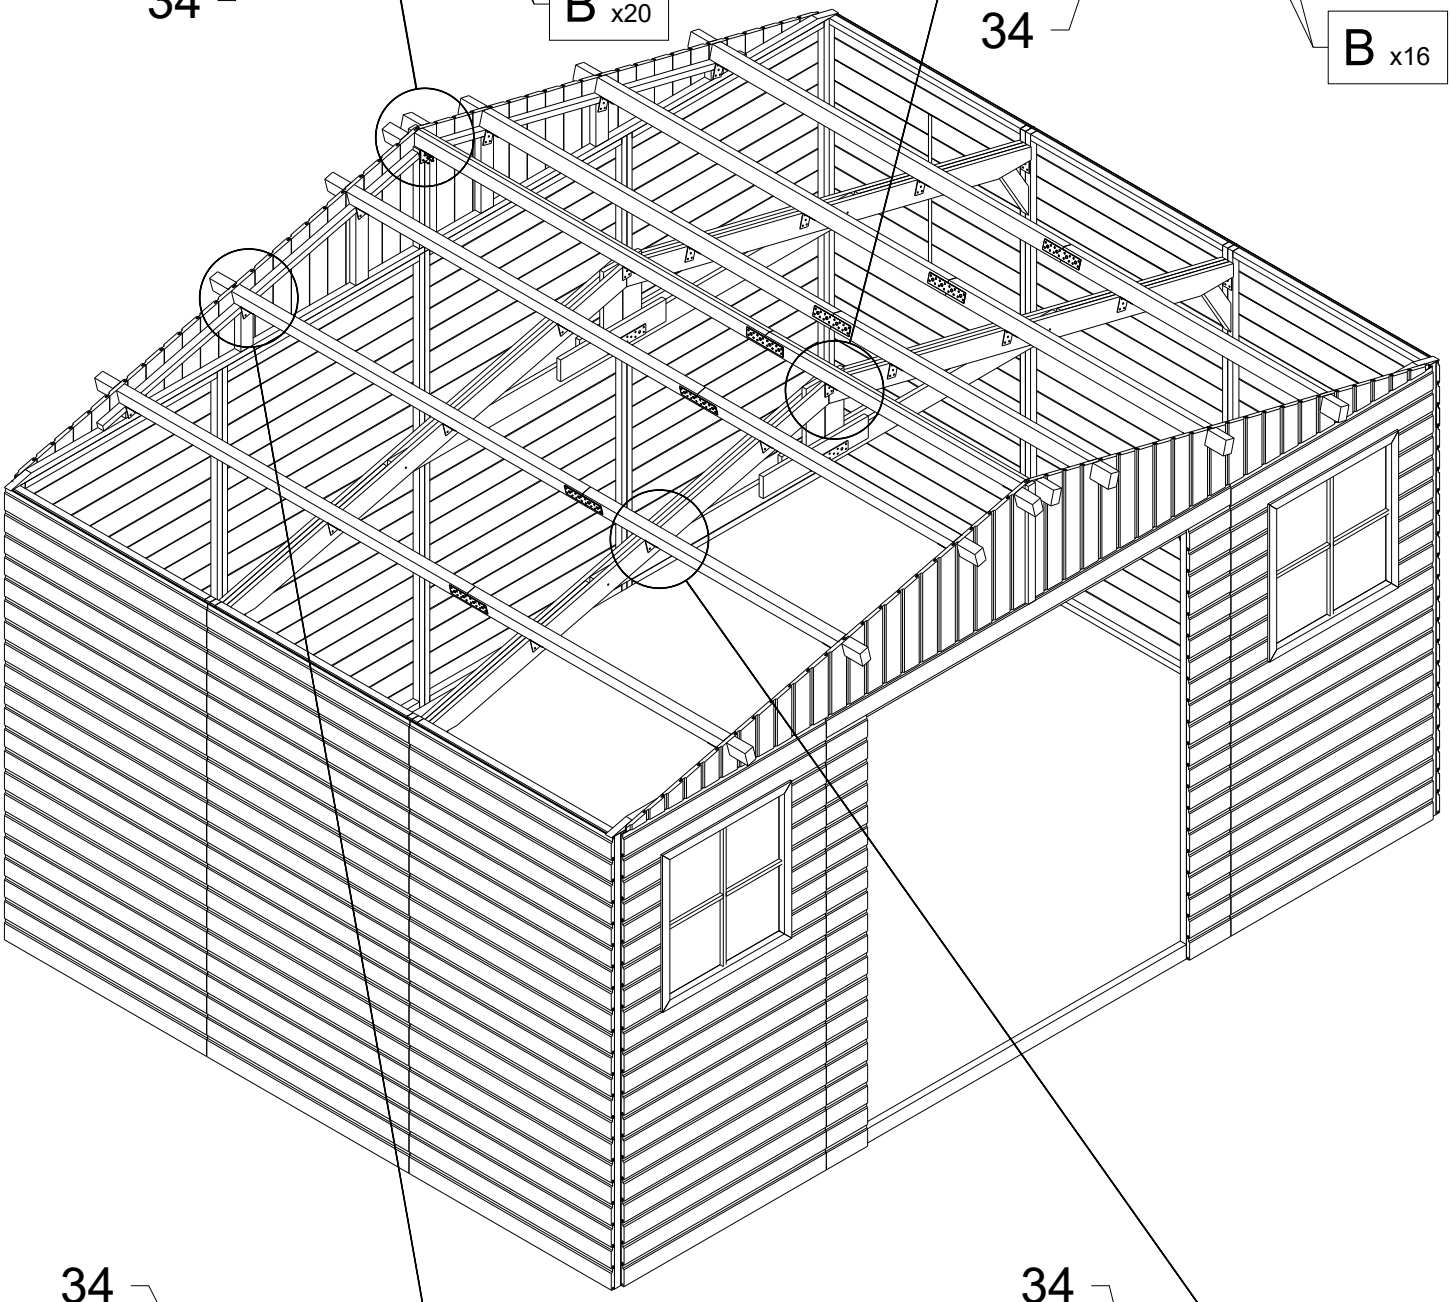


34

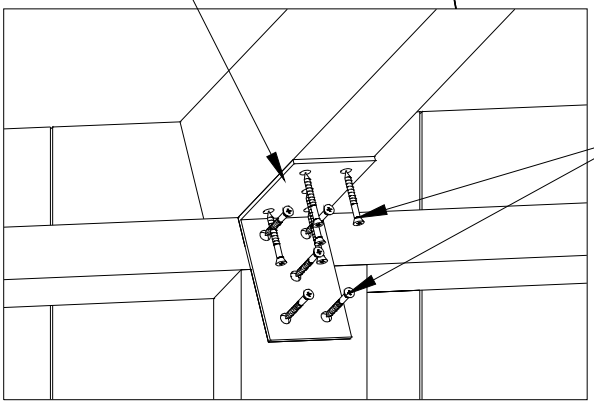


B x240


34

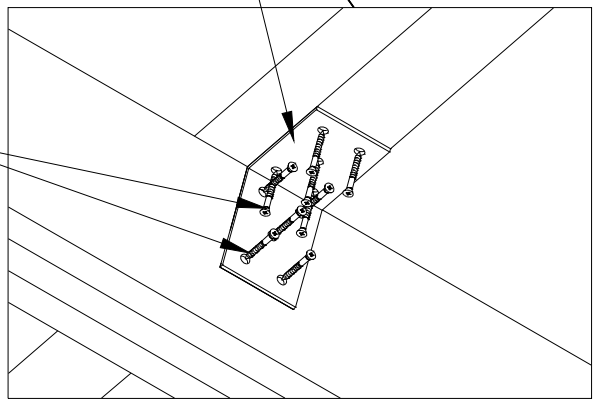



10

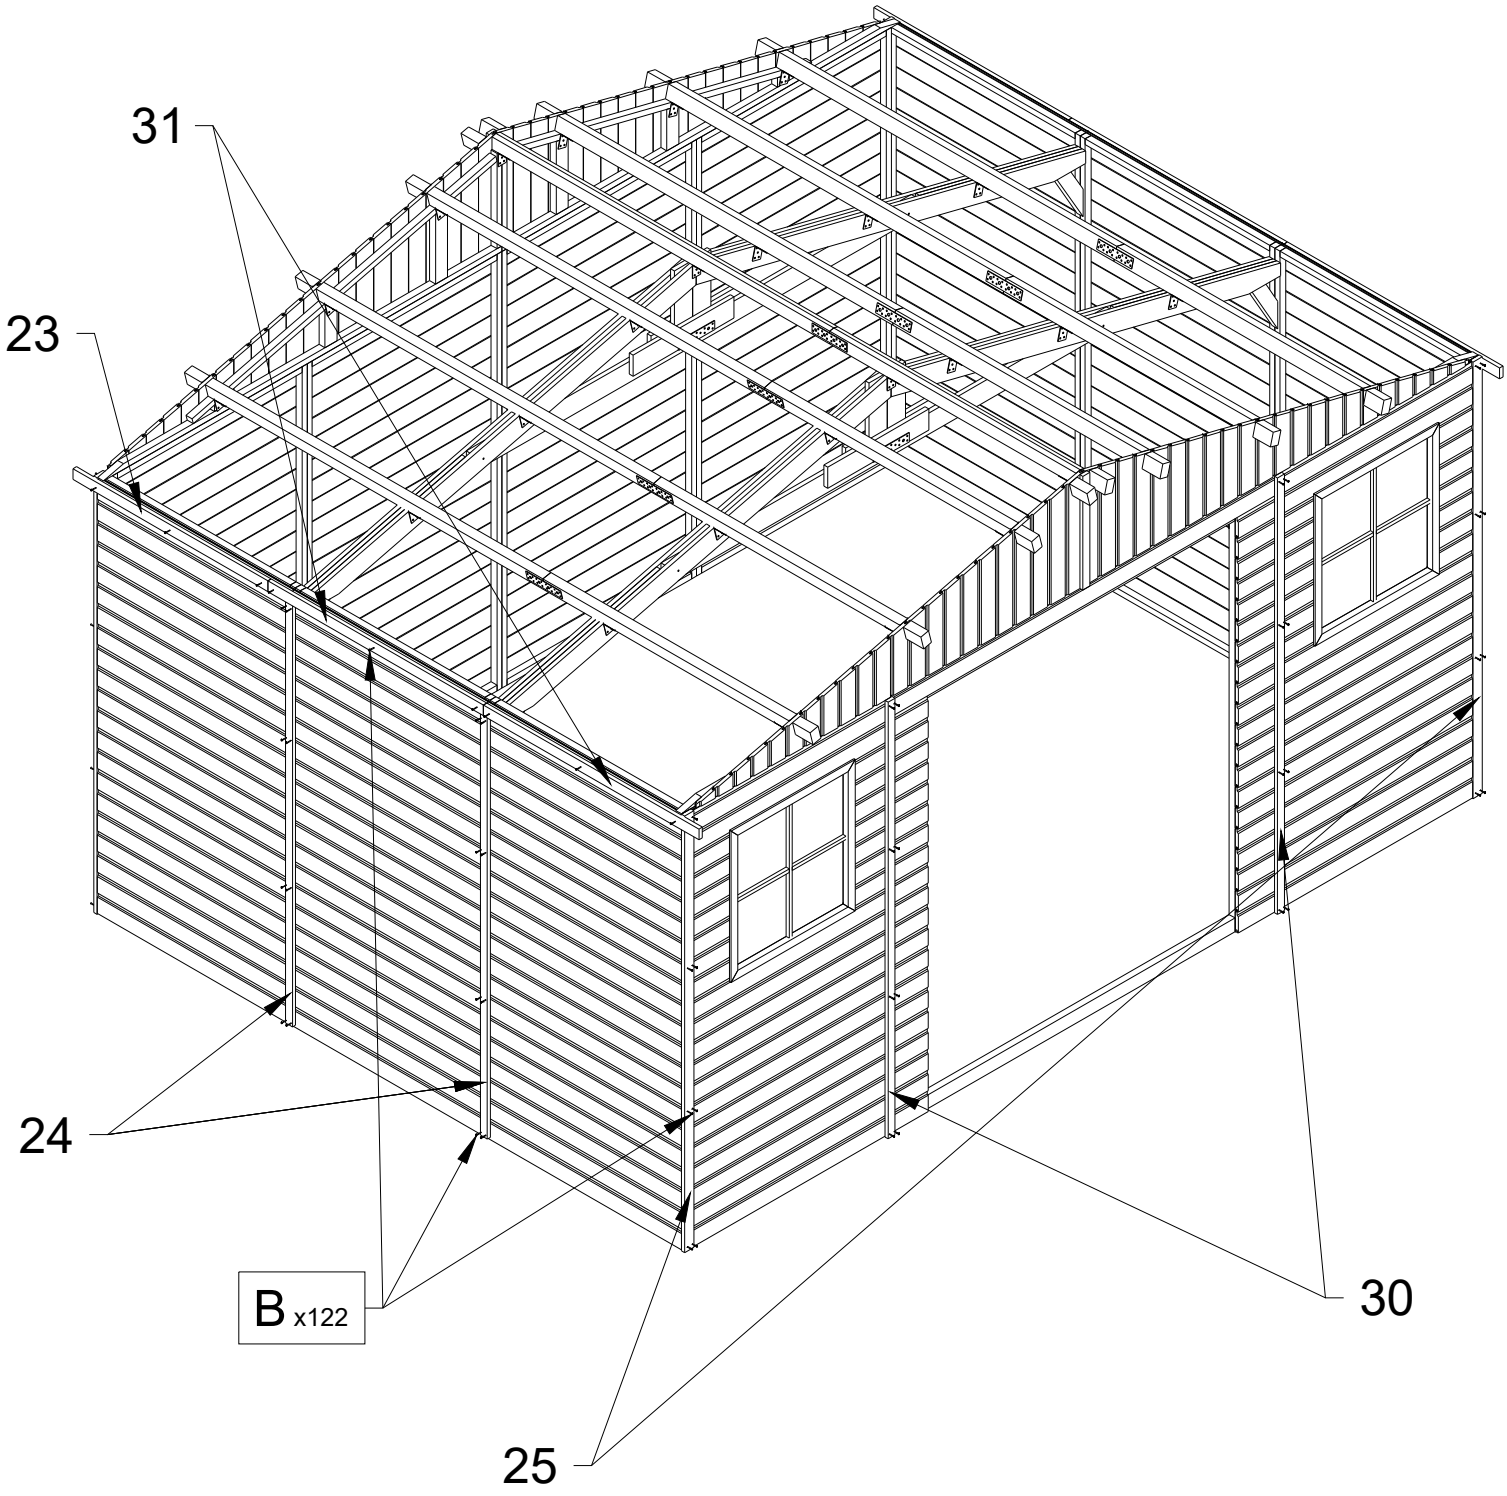

11

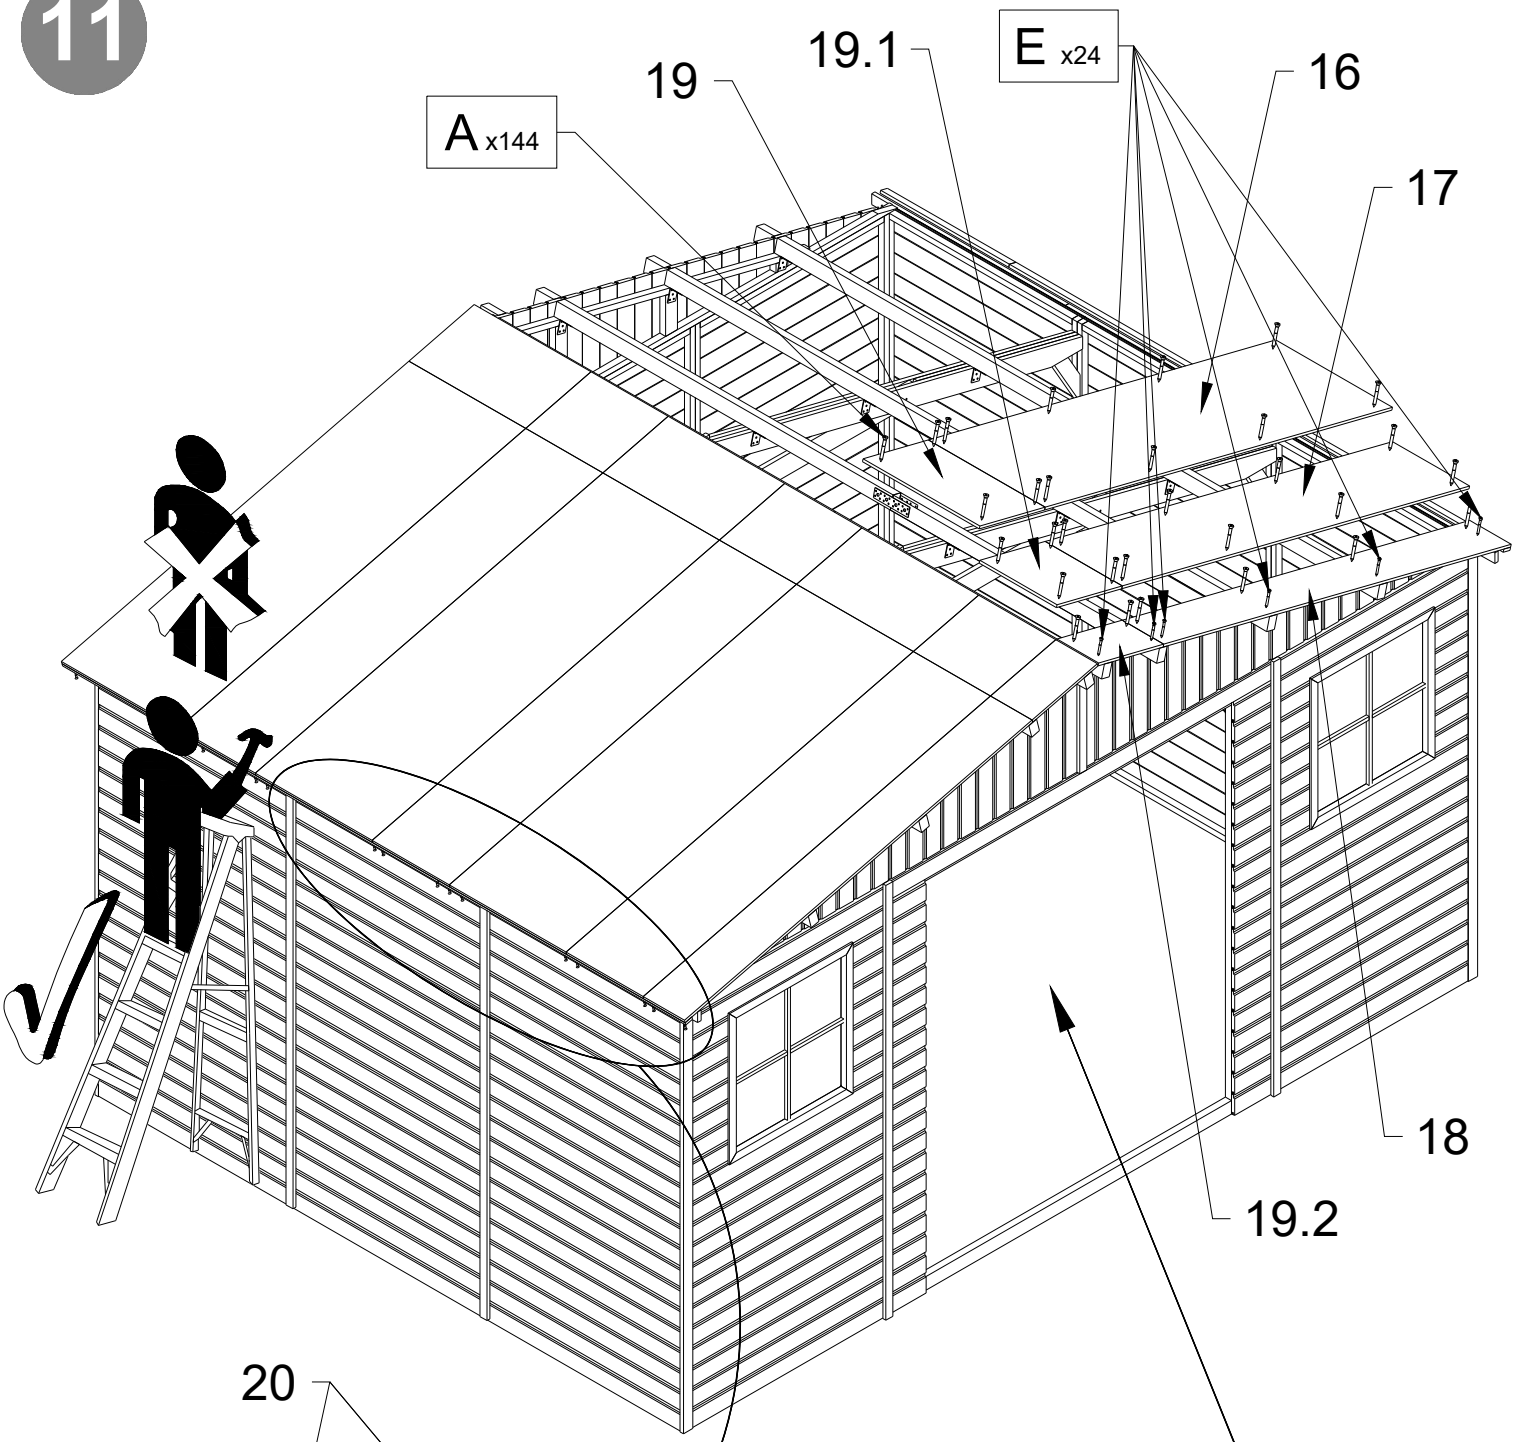


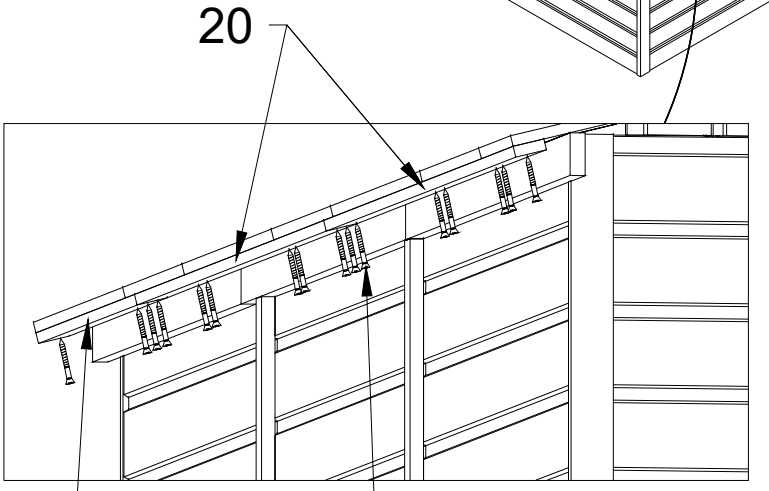

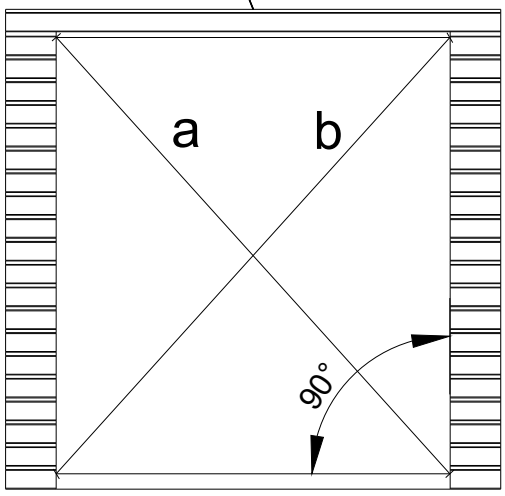


a=b

12

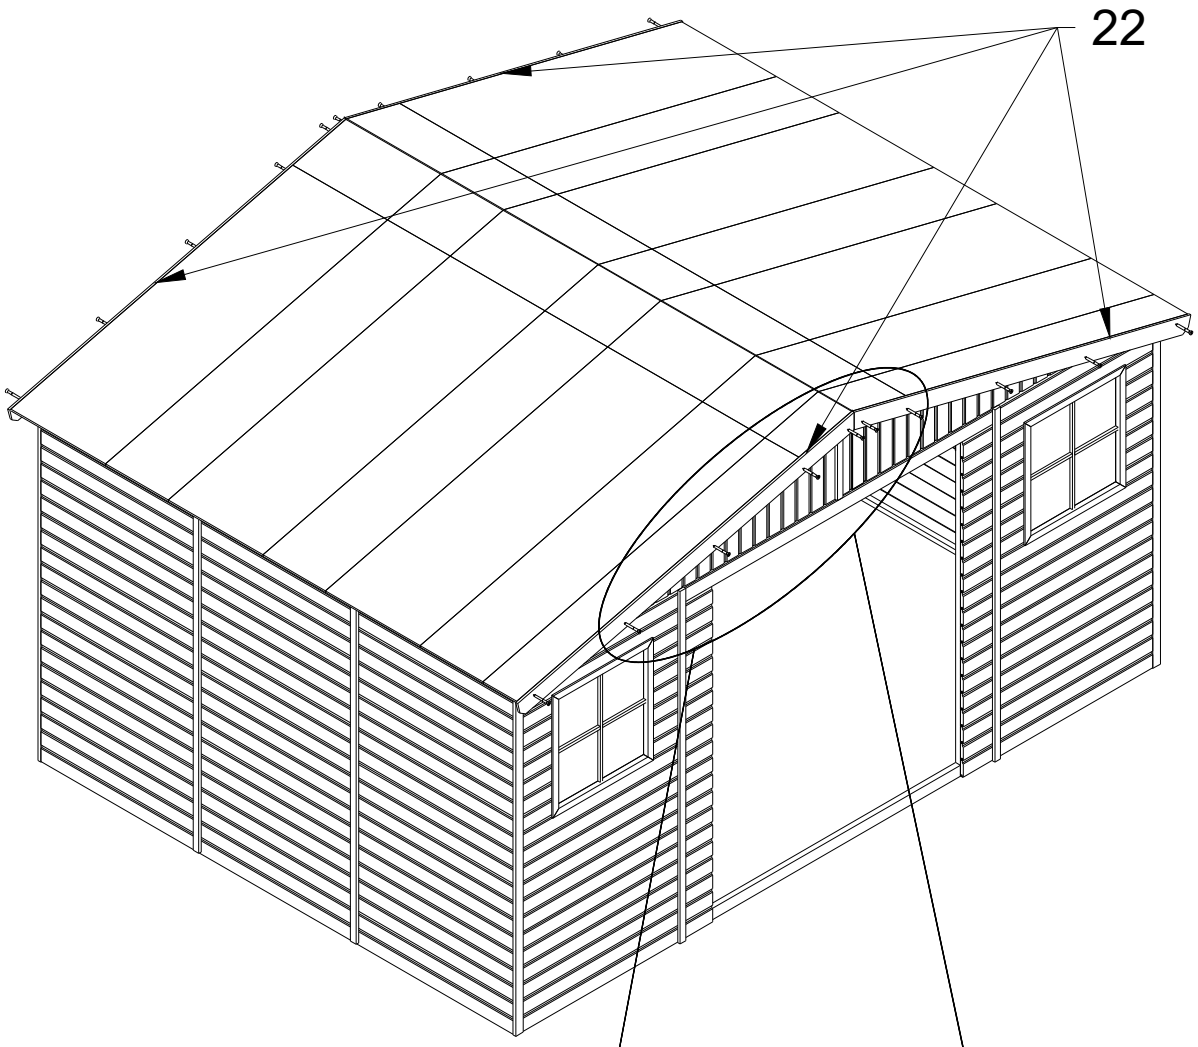


B x20

22

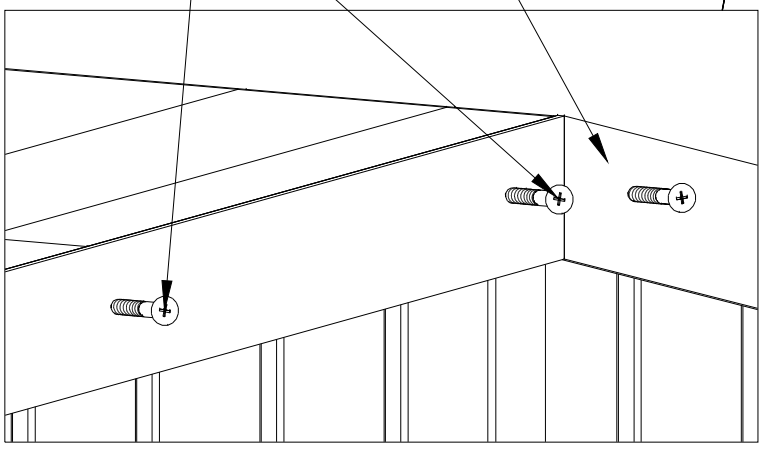

Panel Alignment


22

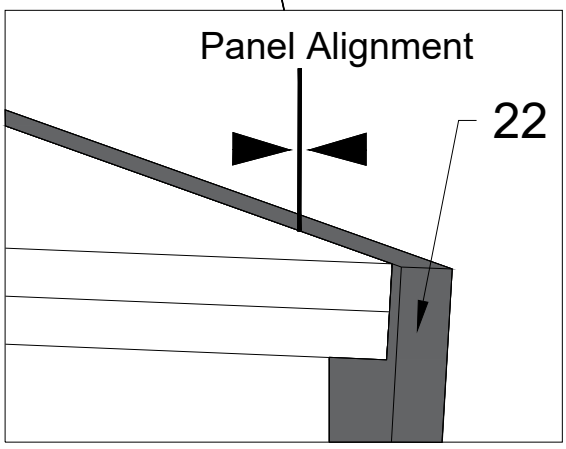



13

C x240 ≈ 100 mm.

33

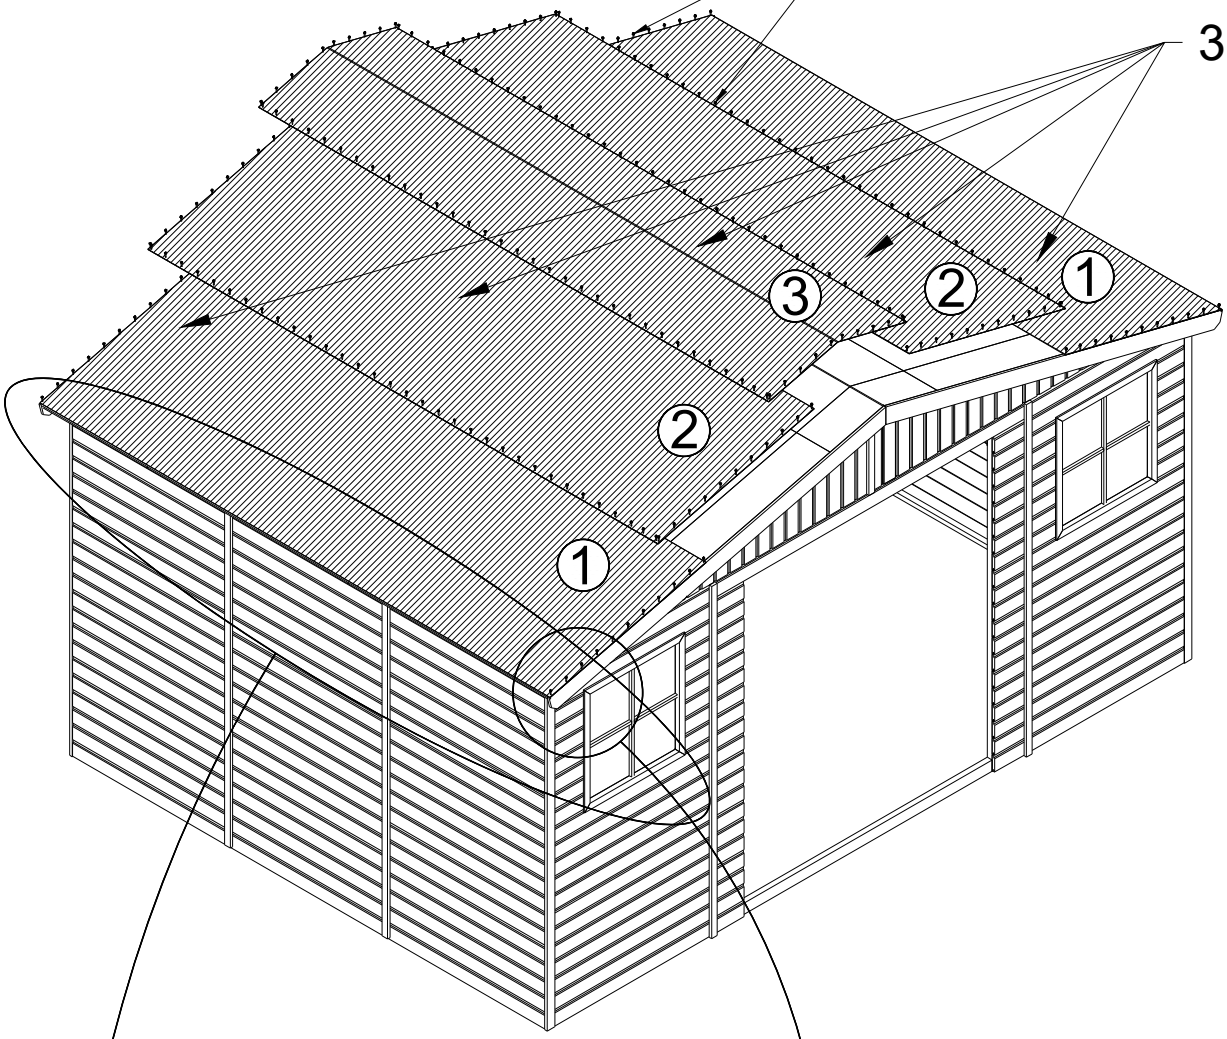

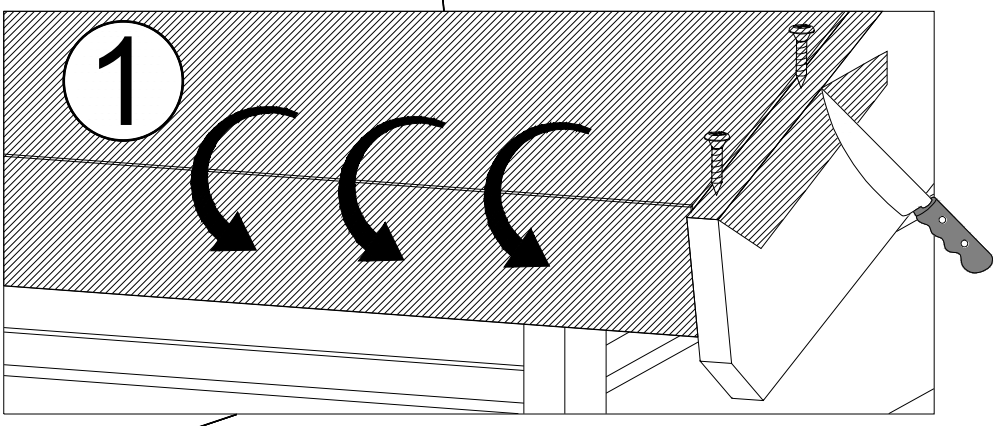


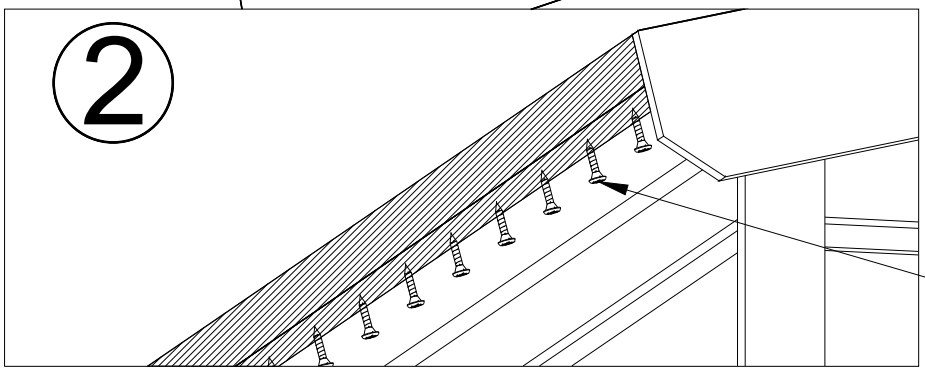



C x66 ≈ 100 mm.

14




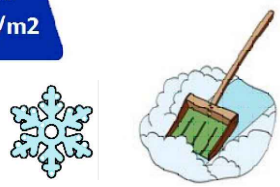


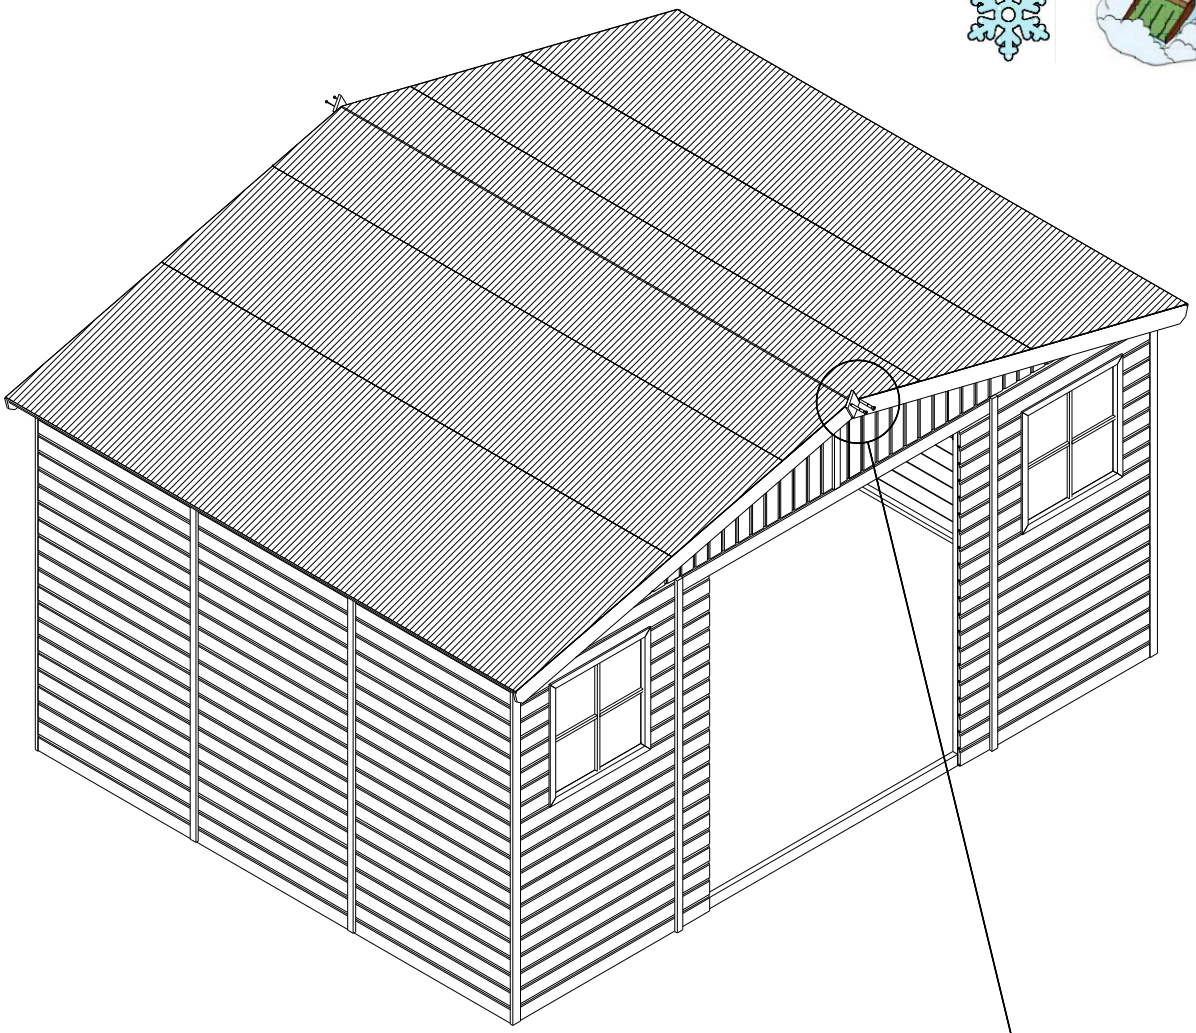


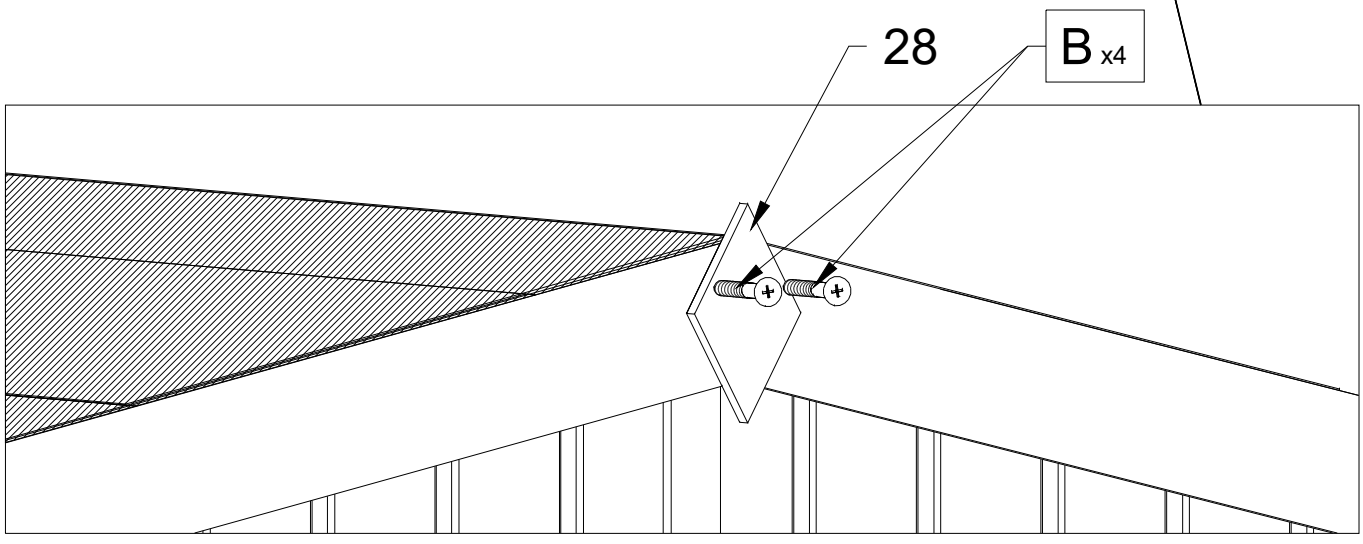



15

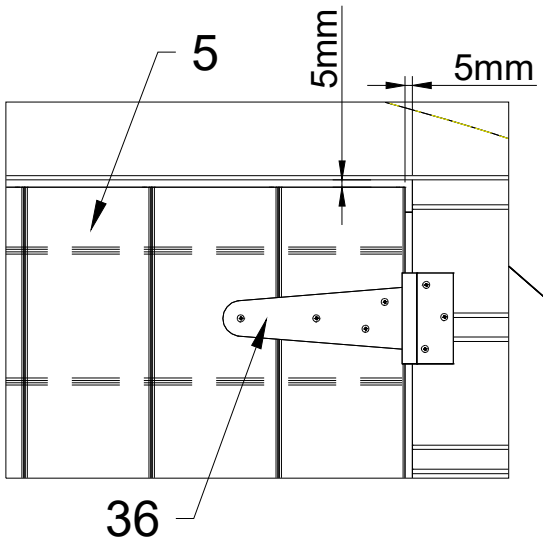

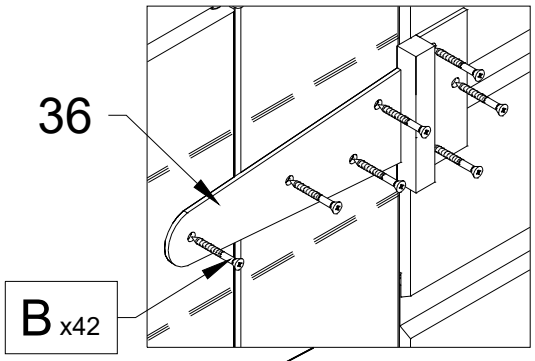


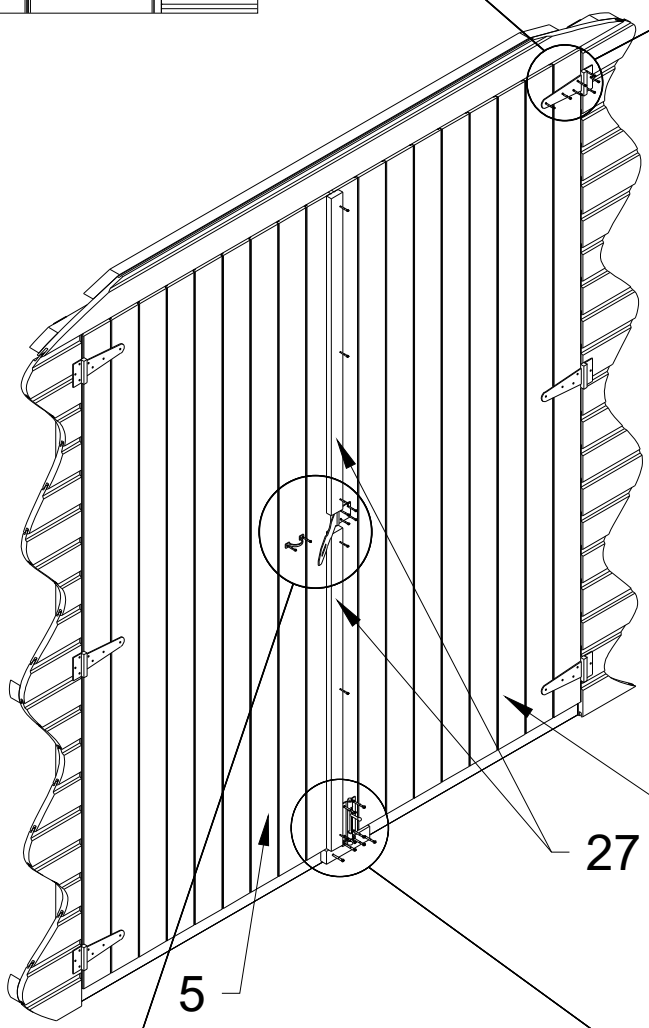

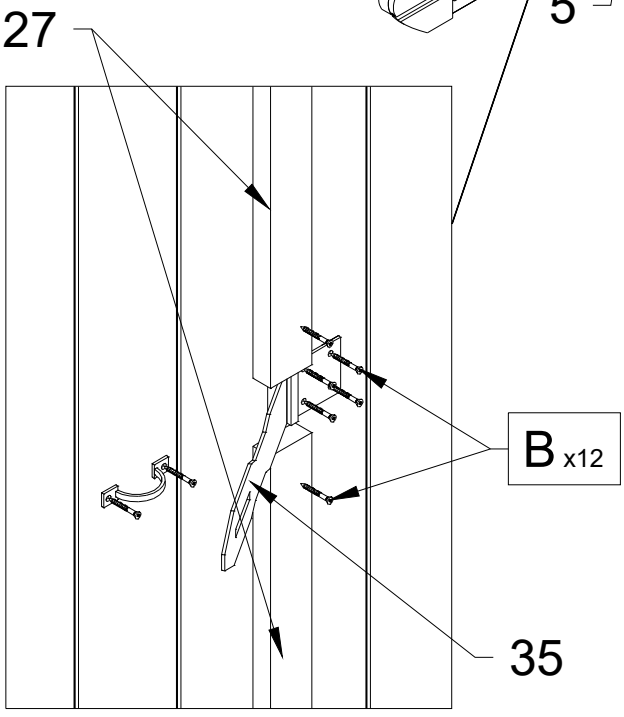

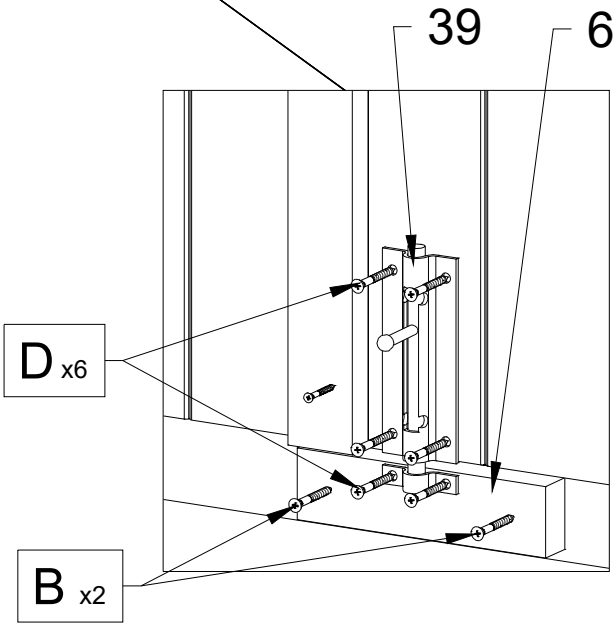

16

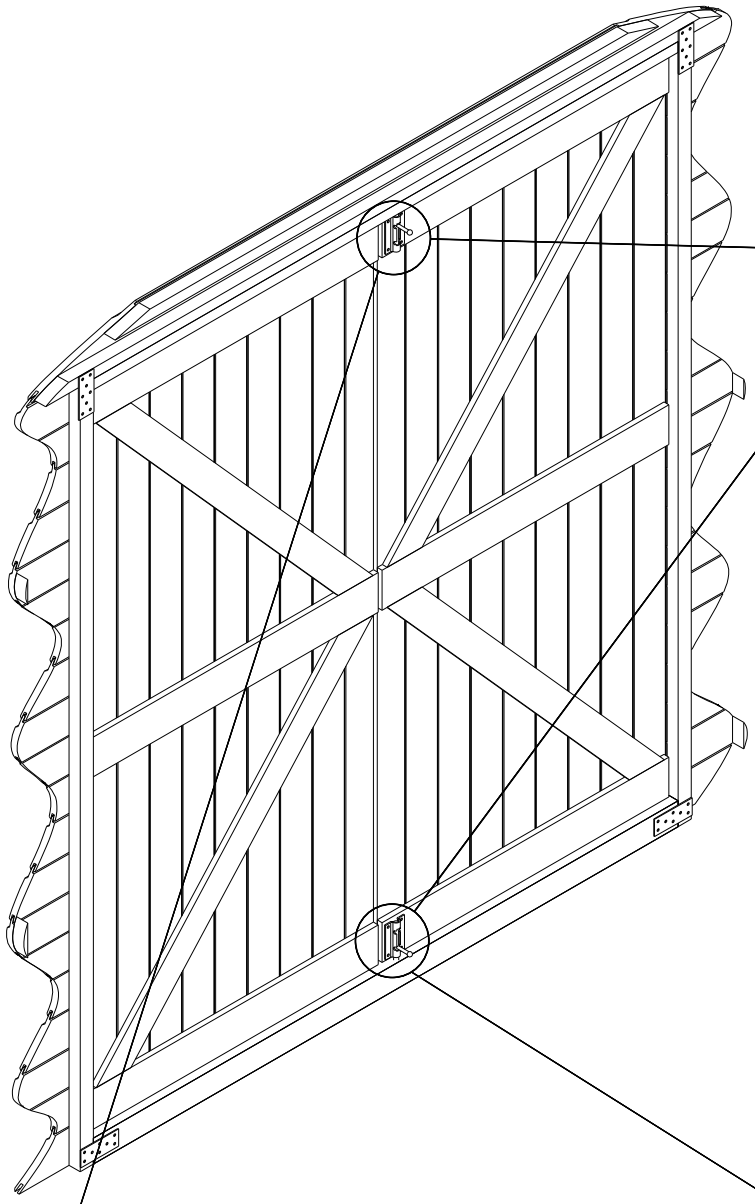

B x8

39

Ø12mm

39